

New functions and addendum

- This document contains descriptions of how to set the new functions and their restrictions.
It is recommended to read them while referring to the Operating Instructions provided with this product together.
- Depending on the model used, the screens shown in the explanations may differ to the actual camera screens.
- The model number is abbreviated in some descriptions in this manual.

Due to software upgrade, the following functions have been added and changed to this product.

• Firmware Ver.2.60

No.	Functions	Item (Page)	Page
1	Change in restrictions on characters for password	For administrator registration	2
2	[Drawing method], [Decoding Options], [Frame Skip Options (When PC is Heavy Processing Load)] are added to Viewer software	Basic (Basic)	3
3	Change of authentication method default setting	User auth. (User mng.)	5
4	User authentication function for host authentication is added	Host auth. (User mng.)	6
5	Change of default setting of "Bandwidth control(bit rate)"	Network (Network)	7
6	Encryption of the settings	Data (Maintenance)	8
7	"Login failure" indication added to the login-related display	About the displayed system log	9

• Firmware Ver.4.00

No.	Functions	Item (Page)	Page
8	Addition of "Overlay Image" function.	Overlay (Image/Audio)	10
9	Change in encryption of the settings.	Data(Maintenance)	13

1. Change in restrictions on characters for password (Operating Instructions For administrator registration)

Administrator registration
Enter the user name and password of the administrator.

User name (1 to 32 characters)	<input type="text"/>
Password (8 to 32 characters)	<input type="password"/>
Retype password	<input type="password"/>

Note:

- (1) Distinguish between upper- and lower cases.
- (2) Entry of the following is not allowed as a user name: 2-byte characters, and 1-byte symbols " & ; \
- (3) Entry of the following is not allowed as a password: 2-byte characters, and 1-byte symbols " &
- (4) For the password, use three or more types of characters from upper- and lowercase alphabetic characters, numbers, and symbols.
- (5) Keep the user name and password at hand so as not to lose.
- (6) It is recommended to change the password periodically.
- (7) Set the password which does not include the user name.

[Password (8 to 32 characters)]/[Retype password]

Enter the administrator password.

Available number of characters: 8 - 32 characters


Unavailable characters: 2-byte characters, and 1-byte symbols " &

Note

- Distinguish between upper- and lower cases.
- Use three or more types of characters from upper- and lowercase alphabetic characters, numbers, and symbols.
- Set the password which does not include the user name.

2. [Drawing method], [Decoding Options], [Frame Skip Options (When PC is Heavy Processing Load)] are added to Viewer software

(Operating Instructions Configure the basic settings of the camera [Basic]- Configure the basic settings [Basic])

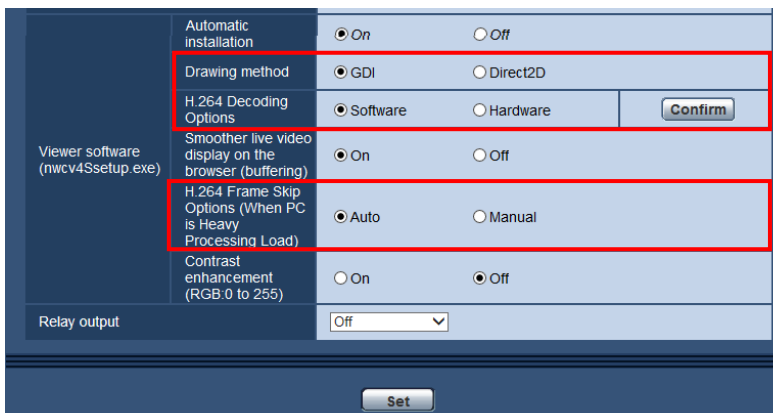

[Viewer software (nwcV4Ssetup.exe)] - [Drawing method]

Perform image display settings when displaying camera images with the viewer software.

- **GDI:** The drawing method generally used in Windows.
- **Direct2D:** Can reduce choppy drawing of images.
- **Default:** GDI

IMPORTANT

- Use “Direct2D” with a computer that has the latest graphic driver version installed to it.
- When using “Direct2D”, set “Smoother live video display on the browser (buffering)” to “On”.
If “Off” is selected for “Smoother live video display on the browser (buffering)”, “Direct2D” may not be very effective.

Note

- If your computer’s operating system is Windows 7 and the Aero function is disabled, “Direct2D” may not be very effective.
- When “Direct2D” is selected for “Drawing method”, video may not be displayed or the displayed image may be seen as it is partially corrupted depending on the PC in use.
- Refer to the Panasonic support website for information of PCs for which “Direct2D” is selectable.
Panasonic website (<https://security.panasonic.com/support/info/> <Control No.: C0313>)

[Viewer software (nwcV4Ssetup.exe)] - [H.264 Decoding Options]

Select the decoding method for H.264 images on the “Live” page.

- **Software:** Decoding is performed by software.
- **Hardware:** Uses the Hardware Acceleration (QSV/DXVA) function that performs fast decoding.
- **Default:** Software

IMPORTANT

- “Hardware” may not be able to be used depending on the computer used.
One of the following messages is displayed when the [Confirm] button is clicked.
 - The hardware decode is available on your PC.
*Depending on your PC environment, Video output may become impossible. In that case it is necessary to select “Software” for “H.264 Decoding Options”.
 - The hardware decode is not available on your PC. It is necessary to select "Software" for "H.264 Decoding Options".

Note

- When “Hardware” is selected for “Decoding Options”, video may not be displayed or the displayed image may be seen as it is partially corrupted depending on the PC in use.
- Refer to the Panasonic support website below for information of PCs for which “Hardware” is selectable.

Panasonic website (<https://security.panasonic.com/support/info/> <Control No.: C0313>)

[Viewer software (nwcV4Ssetup.exe)] - [Frame Skip Options (When PC is Heavy Processing Load)]

Perform settings to display camera images on the viewer software.


- **Auto:** If there is a delay in displaying images from the camera, the delay can be resolved by automatically skipping frames.
- **Manual:** If there is a delay in displaying images from the camera, frames are not skipped automatically.
- **Default:** Auto

Note

- When “Manual” is selected, “Off”, “1 Frame Skip”, “2 Frames Skip”, “4 Frames Skip”, “6 Frames Skip”, or “8 Frames Skip” can be selected for frame skip by right-clicking on the “Live” page. The value selected here will revert to “Off” when the browser is closed.

3. Change of authentication method default setting

(Operating Instructions Configure the settings relating to the authentication [User mng.] - Configure the settings relating to the user authentication [User auth.]

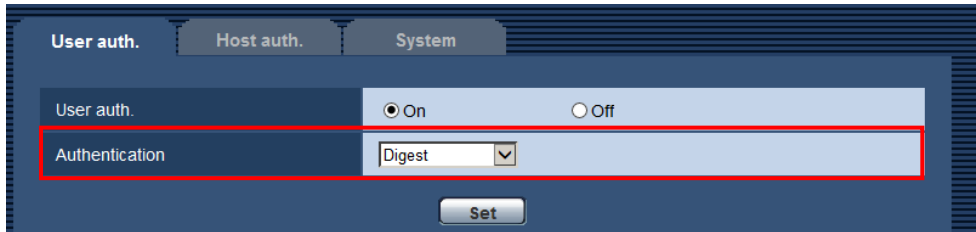

[Authentication]

Set the user authentication method.

- **Digest or Basic:** Uses “Digest or Basic” authentication.
- **Digest:** Uses “Digest” authentication.
- **Basic:** Uses “Basic” authentication.
- **Default:** Digest

IMPORTANT

■ About the system devices (Panasonic network disk recorder and others)

- When connection with a system device cannot be established, upgrade the system device.
- For information on upgrading system devices, refer to the following web site:
<https://security.panasonic.com/support/info/> <Control No.: C0701>
- Support may already be ended for some system devices (discontinuation). In such a case, it may be possible to connect by setting “Basic” for the authentication method of the user authentication.

4. User authentication function for host authentication is added

(Operating Instructions Configure the settings relating to the authentication [User mng.]- Configure the settings relating to the host authentication [Host auth.]

After the host authentication, execute the user authentication according to the setting of the "User auth." (On/Off) to allow the access subject to the authentication.

The screenshot shows the 'Host auth.' configuration page. It features three tabs: 'User auth.', 'Host auth.', and 'System'. The 'Host auth.' tab is selected. The page is divided into three main sections. The first section, 'Host auth.', has two radio buttons: 'On' and 'Off', with 'Off' being the selected option. A 'Set' button is located below these options. The second section, 'IP address', contains a single-line text input field. The third section, 'Access level', has three radio buttons: '1. Administrator', '2. Camera control', and '3. Live only', with '3. Live only' selected. A 'Set' button is positioned below this section. At the bottom of the page, there is a 'Host check' section with a dropdown menu (currently showing a list icon) and a 'Delete' button.

Note

When "On" is set for "User auth.":

The user authentication is required when connecting to this camera using an IP address set as the host authentication.

When "Off" is set for "User auth.":

The user authentication is not required when connecting to this camera using an IP address set as the host authentication.

However, if accessing to the outside of the access level, the user authentication is required.

IMPORTANT

- With the host set by an old version, the user authentication is not required within the access level even if the "User auth." is "On".

For the host set by an old version, asterisk (*) will be displayed at the beginning of the IP address in the "Host check" field.

5. Change of default setting of “Bandwidth control(bit rate)” (Operating Instructions Configuring the network settings [Network]- Configure the network settings [Network])

Change of default setting of “Bandwidth control(bit rate)”

The screenshot displays the 'Advanced' network configuration page. The 'Bandwidth control(bit rate)' option is highlighted with a red border. The interface is organized into sections: IPv4 network, IPv6 network, and Common. The IPv4 section includes fields for Network Settings (set to 'Auto(Advanced)'), IP address (192.168.0.10), Subnet mask (255.255.255.0), Default gateway (192.168.0.1), and DNS settings (set to 'Auto'). The IPv6 section has 'Manual' set to 'Off' and 'DHCPv6' set to 'Off'. The Common section includes HTTP port (80), Line speed (Auto), Max RTP packet size (Unlimited), HTTP max segment size (Unlimited), Bandwidth control (51200kbps), Easy IP Setup (20min), and FTP access (Forbid). A 'Set' button is located at the bottom.

Section	Parameter	Value
IPv4 network	Network Settings	Auto(Advanced)
	IP address(IPv4)	192 . 168 . 0 . 10
	Subnet mask	255 . 255 . 255 . 0
	Default gateway	192 . 168 . 0 . 1
	DNS	<input checked="" type="radio"/> Auto <input type="radio"/> Manual
	Primary server address	0 . 0 . 0 . 0
	Secondary server address	0 . 0 . 0 . 0
	IPv6 network	Manual
IP address(IPv6)		
Default gateway		
DHCPv6		<input type="radio"/> On <input checked="" type="radio"/> Off
Primary DNS server address		
Secondary DNS server address		
Common		HTTP port
	Line speed	Auto
	Max RTP packet size	<input checked="" type="radio"/> Unlimited(1500byte) <input type="radio"/> Limited(1280byte)
	HTTP max segment size(MSS)	Unlimited(1460byte)
	Bandwidth control(bit rate)	51200kbps
	Easy IP Setup accommodate period	<input checked="" type="radio"/> 20min <input type="radio"/> Unlimited
	FTP access to camera	<input type="radio"/> Allow <input checked="" type="radio"/> Forbid

[Bandwidth control(bit rate)]

Select the total bit rate for data transmission from the following.

Unlimited/ 64kbps/ 128kbps/ 256kbps/ 384kbps/ 512kbps/ 768kbps/ 1024kbps/ 2048kbps/ 4096kbps/
8192kbps/ 10240kbps/ 15360 kbps/ 20480kbps/ 25600kbps/ 30720kbps/ 35840kbps/ 40960kbps/
51200kbps

- **Default:** 51200kbps

6. Encryption of the settings

(Operating Instructions Maintenance of the camera [Maintenance] - Settings data/backing up or restoring logs [Data])

The screenshot shows the 'Data' menu of a camera's web interface. It is divided into two main sections: 'Backup' and 'Restore'.
Under the 'Backup' section, there are three rows:

- 'Setup data' with an 'Execute' button.
- 'Scene file' with an 'Execute' button.
- 'Logs' with an 'Execute' button.

Under the 'Restore' section, there are two rows:

- 'Setup data' with a file selection field (containing 'Browse...'), two radio button options: 'Restore all settings.' and 'Restore all settings except the network settings.', and an 'Execute' button.
- 'Scene file' with a file selection field (containing 'Browse...') and an 'Execute' button.

At the bottom of the interface, a message box states: 'It will take around 2 minutes to complete restoring data. Please wait and do not operate the browser during this process.'

Backup

[Setup data]

Click the [Execute] button to backup the setup data of the camera to a PC.

Note

- The settings backed up after this version of software will be encrypted. Therefore, if using the software of older version, the settings cannot be restored.

7. “Login failure” indication added to the login-related display (Operating Instructions About the displayed system log)

Error indications relating to the login errors

Category	Indication	Description
Login failure	User name	<ul style="list-style-type: none">• The user name that has failed in login will be displayed when “On” is selected for “User auth.”.• If no user is registered, “Guest User” will be displayed.

8. Addition of “Overlay Image” function.

(Operating Instructions Configure the basic settings of the camera [Basic])

Added the "Overlay image" function to the “Basic” page.

The “Overlay image” function is a function that superimposes an image uploaded to the camera onto a live image and display it as an overlaid image.

Click the [Overlay image] tab on the “Basic” page.

The settings relating to the “Overlay image” function can be configured on this page.

[Overlay]

Select “On” or “Off” to determine whether to display an uploaded image overlaid.

On: Displays uploaded an image overlaid.

Off: Does not display uploaded an image overlaid.

Default: Off

Note

- You cannot set the "Overlay image" when the "Image capture mode" is "60 fps mode".

[Image Selection]

Upload an image file to be overlaid to the camera in the following procedure.

- 1) Click the [Reference] button and select an image file saved on the PC.
- 2) Click the [Run] button to upload the selected image to the camera.

When the image is uploaded, the uploaded image will be displayed overlaid on the display.

Image files with the following specification are available for the overlay display.

Image format: 8-bit bitmap (BMP: Windows format)

Image size: 24 pixels × 24 pixels - 512 pixels × 512 pixels

File size: 257 KB or less

Note

- Save image files in a folder whose name does not contain a space or two-bytes code. Uploading of an image saved in a folder whose name contains a space or two-bytes code is unavailable.

IMPORTANT

- Do not turn off the power of the camera or operate the camera during uploading of an image file.
- The uploaded image to be displayed will be reduced in size depending on the resolution of live image. Since the uploaded image could sometimes be displayed with low image quality, check the live image page if images are displayed overlaid.
- The images to be uploaded will be saved when they are uploaded.

[Position]

The display position of the uploaded image (upper left corner of the image) will be displayed with [X] and [Y] coordinates.

Overlay image	
Overlay	<input checked="" type="radio"/> On <input type="radio"/> Off
Image Selection	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Execute"/>
Position	X: <input type="text" value="251"/> Y: <input type="text" value="143"/>
Permeation	<input type="radio"/> On <input checked="" type="radio"/> Off
Selection of color to be penetrated	<input type="button" value="Color Selection"/> R: 255 G: 255 B: 255 <input type="text"/>

* In case of upload of overlay image and drag of overlay image, the setting will be immediately reflected.

* You cannot set the "Overlay image" when the "Image capture mode" is "50 fps mode" or "60 fps mode".

*1 In case that [4:3] is set for [Image capture mode] When [16:9] is set for [Image capture mode], [Y] will be "359"

There are following two methods to change the display position of the uploaded image.

- Drag and drop the currently displayed uploaded image using the mouse.
- Enter coordinates to [X] and [Y] and then click the [Set] button.

Available numbers:

- When [4:3] is set for [Image capture mode]:
 - X: 0 – (639 minus the horizontal length of the uploaded image)
 - Y: 0 – (479 minus the vertical length of the uploaded image)
- When [16:9] is set for [Image capture mode]:
 - X: 0 – (639 minus the horizontal length of the uploaded image)
 - Y: 0 – (359 minus the vertical length of the uploaded image)

Default: Center of live image

Note

- A red frame indicating the display position will be displayed during dragging of the uploaded image.
- Coordinates that make the uploaded image out of the setting screen are unavailable to set.
- When an uploaded image is moved by mouse operation, the display position will be saved even if the [Set] button is not clicked.
- If an uploaded image is moved to the edge of the screen, there may be a gap between the image and the screen edge.

IMPORTANT

- After changing the setting of [Image capture mode], check the display position of the uploaded image. When the display position is deviated, configure the display position setting again. If the uploaded image is to be displayed out of the setup screen, the initial display position (center of the live image) will be restored.

[Permeation]

Select “On” or “Off” to determine whether the color selected at [Selection of color to be penetrated] is to be transparent.

On: Gives transparency to the color selected at [Selection of color to be penetrated].


Off: Does not give transparency to the color.

Default: Off

[Selection of color to be penetrated]

Select a color to be penetrated in the following procedure.

- 1) Click the [Color Selection] button. A sub window displaying the uploaded image will be displayed.
- 2) Click a color to be penetrated in the displayed image. The selected color and RGB values will be displayed.
- 3) Click the [Close] button to close the sub window.
- 4) Click the [Set] button lastly. The selected color will be penetrated.

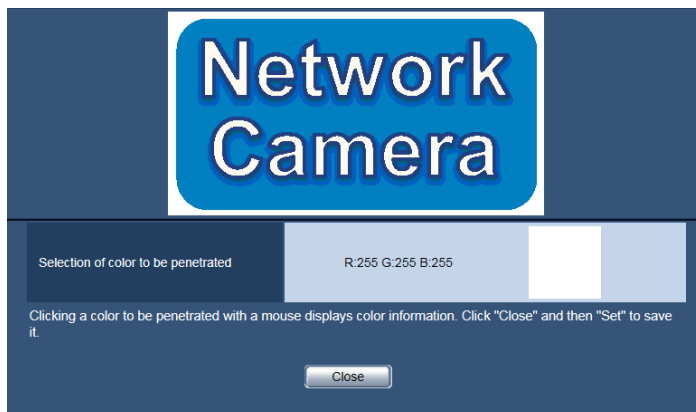

9. Change in encryption of the settings.

(Operating Instructions Maintenance of the camera [Maintenance] - Settings data/backing up or restoring logs [Data])

The screenshot shows a web interface with a top navigation bar containing 'System log', 'Upgrade', 'Status', 'Default reset', and 'Data'. The 'Data' tab is active. Below the navigation bar, there are two main sections: 'Backup' and 'Restore'. In the 'Backup' section, there are three rows: 'Setup data' with an 'Execute' button, 'Scene file' with an 'Execute' button, and 'Logs' with an 'Execute' button. In the 'Restore' section, there are three rows: 'Setup data' with a file input field, a 'Browse...' button, and two radio button options: 'Restore all settings.' and 'Restore all settings except the network settings.' (which is selected), followed by an 'Execute' button; 'Scene file' with a file input field, a 'Browse...' button, and an 'Execute' button. At the bottom of the page, there is a light blue box with the text: 'It will take around 2 minutes to complete restoring data. Please wait and do not operate the browser during this process.'

Backup

[Setup data]

Click the [Execute] button to backup the setup data of the camera to a PC.

Note

- Encryption of the settings has been changed after this version. Therefore, if you revert the software to the previous version, the settings cannot be restored.