
 
 







 








 


 














 










 


Operation Using The System Controllers

It is possible to operate this recorder using a PS-Data compatible system controller.

The following are the descriptions of how to operate this recorder using the system controller WV-CU650.

To operate the recorder using a PS-Data compatible system controller, perform the required settings in advance. Refer to your system administrator for further information.

Operation	WJ-HD616K/WJ-HD716K	WV-CU650	Note
Open/Close the SETUP MENU	 Press for 2 seconds	After displaying the "System Setup (301)" sub-menu F1  Open the SETUP MENU F2  Close the SETUP MENU	At the default setting of the WV-CU650, it is possible to display the "System Setup (301)" submenu by pressing the  button while holding the  button down.
Select an item			
Change the set parameter	 Rotate the jog dial	 or 	Characters will be deleted when pressing the  button while the on-screen keyboard (for character entry) is displayed.
Change the cursor position		 or 	
Press a button on the pop-up menu		 or 	
Return to the previous menu			
Display the recording event list or VMD search list		 Press 2 times	Press the  button to start playback.
Display the menu for playback by designating time and date			Press the  button to start playback.
Move the cursor to search for an item	 Press  or  .		
Move the cursor (green) to select an item in the list window	 Rotate the jog dial		
Change the pages of the list window	 Rotate the shuttle ring		
Close the search window			
Alarm reset		 	
Alarm suspension	 + 	 +  ALM SUSPEND	
Manual recording			
Stop manual recording	 Press for 2 seconds or more	 Press for 2 seconds or more	Available only during recording
Stop playback/manual recording	-	 →  + 	Both recording and playback will be stopped if operating the controller as shown on the left.

Operation	WJ-HD616K/WJ-HD716K	WV-CU650	Note
Play			
Stop playback			
Fast forward/reverse	During playback/pause 		Playback speed will be maintained by pressing the button during fast forward/reverse.
Pause playback			Available only during playback
Skip to the next/previous frame	During pause 		Available only during pause
Skip to the next/previous playback	During playback 		The point to be skipped to will be different between normal playback and filtered playback.
Skip to the latest recorded image			
Select monitor 1			
Select monitor 2			
Sequential display ON	Lights green		It is possible to stop the sequential display by pressing a camera selection button or by pressing the button while holding the button down.
Select a camera	Camera selection buttons (1 - 16)	Camera number →	
Select a multi-screen			Refer to the Operating Instructions (PDF) about the sequential order.
Electronic zoom	Select the electronic zoom from the submenu.		Zooming level changes in this order: 2x → 4x → 1x
Display the DATA COPY menu		→ +	DATA COPY menu will be closed by pressing the button.
Cancel copying		During copying → +	
Media copying operation (DVD)	Select the media from the submenu.	→ +	
Switch displayed information			