

advidia

ADVIDIA TOOLS

User Manual

Thank you for purchasing our product. If there are any questions, or requests, please do not hesitate to contact the dealer.

Notice




- The contents of this document are subject to change without prior notice.
- Best effort has been made to verify the integrity and correctness of the contents in this document, but no statement, information, or recommendation in this manual shall constitute formal guarantee of any kind, express or implied.
- The product appearance shown in this manual is for reference only and may be different from the actual appearance of your device.
- The illustrations in this manual are for reference only and may vary depending on version or model.
- This manual is a guide for multiple product models and so it is not intended for any specific product.
- Due to uncertainties such as physical environment, discrepancy may exist between the actual values and reference values provided in this manual. The ultimate right to interpretation resides in our company.
- Use of this document and the subsequent results shall be entirely on the user's own responsibility.

Conventions

The following conventions apply in this manual:

- Devices that the software manages, such as IP camera (IPC) and network video recorder (NVR), are referred to as device.

Convention	Description
Boldface font	Commands, keywords, parameters and GUI elements such as window, tab, dialog box, menu, button, etc.
<i>Italic font</i>	Variables for which you supply values.
>	Separate a series of menu items, for example, Device Management > Add Device .

Symbol	Description
 WARNING!	Contains important safety instructions and indicates situations that could cause bodily injury.
 CAUTION!	Means reader be careful and improper operations may cause damage or malfunction to product.
 NOTE!	Means useful or supplemental information about the use of product.

Contents

1 Introduction	1
2 Upgrade.....	1
3 Functions.....	2
Preparation	2
Search Devices.....	2
Log in to Devices.....	3
Management and Configuration.....	4
Manage Device Password	4
Change Device IP Address	5
Configure Device	5
Configure Channel.....	7
View Device Info.....	11
Export Device Info	11
Export Diagnosis Info.....	11
Configuration Import/Export	12
Restore Default Settings.....	12
Restart Device	13
Log in to the Web of a Device	13
Upgrade Device	13
NVR Channel Management	15
Cloud Service.....	16
Calculation.....	17
Tips for Usage	21
Select Devices.....	21
Filter Device List	21
Sort Device List.....	22
Customize Device List.....	22
Copy NVR Channel Configurations	22
Export and Import OSD Configurations of an IPC	23

1 Introduction

This software is a tool used to manage and configure devices on a local area network (LAN) including IPC and NVR. Major functions include:

	Function
Device Configuration	Configure the device name, system time, DST, network, DNS, port of an IPC or NVR. Besides, Change Device Password and Change Device IP Address are also included.
Channel Configuration	Configure channel settings including image, encoding, OSD, audio and motion detection.
Upgrade Device	<ul style="list-style-type: none">• Local Upgrade: Upgrade device(s) using an upgrade file on your computer.• Online Upgrade: Check the device firmware version, download upgrade files and upgrade the device with Internet connection.
Maintenance	Includes Configuration Import/Export , Export Diagnosis Info , Restart Device , and Restore Default Settings .
NVR Channel Management	Includes adding NVR channel and deleting NVR channel.
Calculation	Calculate recording time allowed or disks needed.

Before you start, make sure the computer on which this software runs and the devices to manage are connected by network.

2 Upgrade

Check for updates, download and install the latest version.

1. A “New Version” prompt appears in the upper right corner if a new version is detected.




2. Click **New Version** to view details and download the new version.



Name: Guard Tools 2.0

Version: [R1122.2.3.0.210518](#)

[Updates Available\(R1122.2.3.0.210623\)](#)

3. You can choose to install immediately or later when the new version is downloaded. Clicking  in the upper right corner will cancel the installation.
- **Install Now:** Close the software and start installation immediately.
 - **Install Later:** The installation will start after the user closes the software.



Download completed. Choosing Install Now will close the software automatically.

Install Now

Install Later

3 Functions

Preparation

Search Devices

The software automatically searches for devices on the LAN where the PC resides and lists the discovered. To search a specified network, follow the steps as shown below:

Refresh Search Setup 1

Search Setup

Search Mode Automatic Search Specified Search 2

From 3 192 . 168 . 0 . 1 To 192 . 168 . 0 . 255

List Items

Version MAC Serial No. Subnet Mask

Gateway Device Status

OK Cancel

Log in to Devices


You need to log in to a device before you can manage, configure, upgrade, maintain or restart a device. Choose the following methods to log in to your device:

- Log in to device in the list: Select the device(s) in the list and then click the **Login** button on the top.

Login 2 Manage Device Password IP Modify IP Device Config Export


✓	Device Name	IP	Model	Version	Device Status	Operation	Operation Status
<input checked="" type="checkbox"/>	IPC-E616-IR@DU-X...	192.168.4.123	IPC-E616-IR	QIPC-B1203.13.2.201010	Not logged in	IP	..
<input checked="" type="checkbox"/>	IPC-B301-IR1@P-F36	192.168.4.178	IPC-B301-IR1	IPC_D1201-B5022P12D1702	Not logged in	IP	..
<input checked="" type="checkbox"/>	TIC6831-IR@F50-4...	192.168.4.164	TIC6831-IR	QIPC-B2201.9.3.210426H01	Not logged in	IP	..

- Log in to device not in the list: Click **Login**, and then enter the IP, port, username and password of the device you want to log in to.

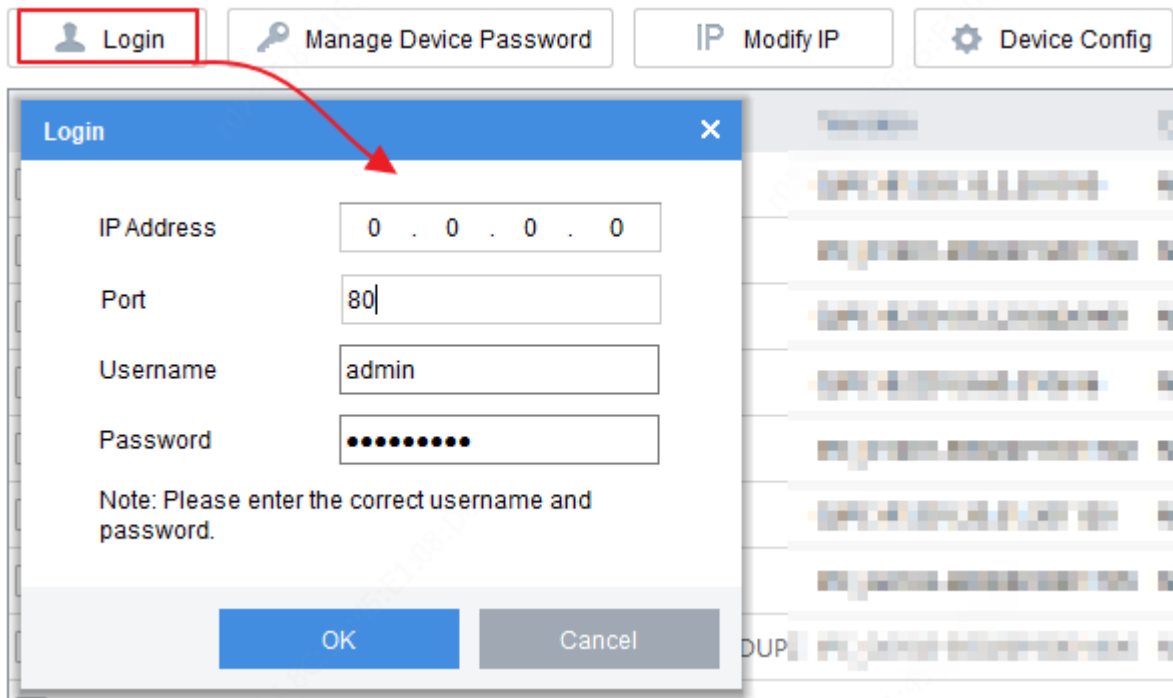

Management and Configuration

Manage Device Password

- Complete verification info
The email address will be used to retrieve the password in case you forget it.
 - a. Click **Device Cfg.** on the main menu.
 - b. Select device(s), then click **Manage Device Password > Verification Info** on the top toolbar.
 - c. Enter an email address, then click **OK**.
- Change device password
The default password is only intended for the first login. For security, please change the password when logged in. You can only change the admin's password.
 - a. Click **Device Cfg.** on the main menu.
 - b. Choose the following methods to change device password:
 - For a single device: Click  in the **Operation** column.
 - For multiple devices: Select devices, then click **Manage Device Password > Change Password** on the top toolbar.

Device Name	IP	Model	Version	Device Status	Operation	Operation Status
IPC3634ER3-DPZ28	192.168.4.102	IPC3634ER3-DPZ28	GIPC-B6102.26.36.200909	Logged in	IP	Login succeeded
HIC6881-IR@X38-L...	192.168.4.98	HIC6881-IR	QIPC-B2201.8.0.201013	Logged in	IP	Login succeeded

Change Device IP Address

1. Click **Device Cfg.** on the main menu.
2. Choose the following methods to change device IP:
 - For a single device: Click **IP** in the **Operation** column.
 - For multiple devices: Select the devices, and then click **Modify IP** on the top toolbar. Set the start IP in the **IP Range** box, and the software will automatically fill in other parameters according to the number of devices. Please make sure the username and password are correct.

IP(old)	IP(new)	Subnet Mask	Gateway	Username	Password	Operation Status
192.168.4.123	192.168.4.123	255.255.255.0	192.168.4.1	admin	••••••	Not logged in
192.168.4.178	192.168.4.124	255.255.255.0	192.168.4.1	admin	••••••	Not logged in
192.168.4.164	192.168.4.125	255.255.255.0	192.168.4.1	admin	••••••	Not logged in

Configure Device

Configure the device name, system time, DST, network, DNS, port of an IPC or NVR.

1. Click **Device Cfg.** on the main menu.
2. Click in the **Operation** column.



NOTE!

You may select multiple devices to batch configure device system time, DST, DNS, port. Device name and network settings cannot be configured in batches.

3. Configure device name, system time, DST, network, DNS, port as needed.

- Configure device name.

Device Name

- Configure the time.
Synchronize the time of the computer or NTP server to the device.

- Turn off **Auto Update**: Click **Sync with Computer Time** to synchronize the computer's time to the device.
- Turn on **Auto Update**: Set the NTP server address, NTP port and update interval, then the device will synchronize time with the NTP server at set intervals.

Time Zone: (UTC+03:30)Tehran

System Time: 2021-6-21 15:05:15 Sync with Computer Time

Auto Update: On Off

NTP Server Address: 0 . 0 . 0 . 0

NTP Port: 123

Update Interval: 10m

- Configure Daylight Saving Time (DST).

DST: On Off

Start Time: Feb First Mon 00 o'clock

End Time: Mar Second Mon 00 o'clock

Bias: 90 min

- Configure network settings.

IP Obtain Mode: Static IP Address Port Type: Copper Port

IP Address: 206 . 10 . 252 . 127 Operating Mode: Auto-Negotiation

Subnet Mask: 255 . 255 . 0 . 0

Gateway: 206 . 10 . 0 . 1

- Configure the DNS.

Preferred DNS Server: 8 . 8 . 8 . 8


Alternate DNS Server: 8 . 8 . 4 . 4

- Configure ports.

HTTPS Port	<input type="text" value="443"/>
HTTP Port	<input type="text" value="80"/>

Configure Channel

Configure channel settings including image, encoding, OSD, audio and motion detection. The parameters displayed may vary with device model.

1. Click **Channel Cfg.** on the main menu.
2. Click  in the **Operation** column.



NOTE!

You may select multiple IPCs of the same model and then click **Channel Config** on the top toolbar. NVR cannot be configured in batches.

3. Configure image, encoding, OSD, audio and motion detection as needed.
 - Configure image settings, including image enhancement, scenes, exposure, smart illumination, and white balance.



NOTE!



- A double-click on the image will display it in full screen; another double-click will restore the image.
- Clicking **Restore Default** will restore all the default image settings. After restoration, click **Get Parameters** to obtain the default settings.
- To enable multiple scene schedules, select **Multiple Scenes** from the **Mode** drop-down list, select scenes and set the corresponding schedules, illumination ranges, and elevation ranges. Select the check box for the scenes that you have set, and then select the **Enable Scene Schedule** check box at the bottom to make the schedules effective. When conditions are met for a scene, the camera will switch to this scene; otherwise, the camera uses the default scene (shows  in the **Operation** column). You can click  to specify the default scene.
- You may copy image, encoding, OSD and motion detection configurations of an NVR channel and apply them to other channel(s) of the same NVR. See [Copy NVR Channel Configurations](#) for details.



Image Enhancement

Brightness

Saturation

Contrast

Sharpness

2D NR

3D NR

Image Rotation

Scenes

Mode

Select Scene

Exposure

Exposure Mode

Shutter ~

Gain(dB) ~

Slow Shutter On Off

Slowest Shutter

Compensation

Day&Night Mode

Day&Night Sensitivity

Day&Night Switching(t:

WDR

WDR Level

Smart Illumination

- Configure encoding parameters.

Current Channel: Channel 001

Capture Mode: 1920x1080@25

Main

Compression: H.264

Resolution: 1920x1080(1080P)

Frame Rate(fps): 25

Bit Rate(Kbps): 4096 [128 ~ 16384]

Bit Rate Type: CBR

Image Quality: Bit Rate Quality 5

I Frame Interval: 50 [5 ~ 250]

GOP: IP

Smoothing: Clear Smooth

Smart Encoding: Off

Enable Sub

Compression: H.264

Resolution: 720x576(D1)

Frame Rate(fps): 25

Bit Rate(Kbps): 1024 [128 ~ 16384]

Bit Rate Type: CBR

Image Quality: Bit Rate Quality 5

I Frame Interval: 50 [5 ~ 250]

GOP: IP

Smoothing: Clear Smooth

Smart Encoding: Off

Copy To

- Configure OSD.



Display Style

Effect: Background

Font Size: X-large

Font Color: #000000

Min.Margin: None

Date Format: yyyy-MM-dd

Time Format: HH:mm:ss

✓	No.	Position	Overlay OSD Content
<input checked="" type="checkbox"/>	1	Area1	<PTZ Coordinates>
<input checked="" type="checkbox"/>	2	Area2	<Date & Time>
<input type="checkbox"/>	3	Area3	
<input type="checkbox"/>	4	Area4	
<input type="checkbox"/>	5	Area5	
<input type="checkbox"/>	6	Area6	
<input type="checkbox"/>	7	Area7	
<input type="checkbox"/>	8	Area8	

Overlay Area1

X: 24 Y: 28 Aligning: Left

Export Import



NOTE!

You can export and import OSD configurations of IPC channel(s). See [Export and Import OSD Configurations of an IPC](#) for details.

- Configure audio.

Currently this function is not available for NVR channels.

Audio Input On Off

Audio Input Gain [0 ~ 255]

Encoding Format

Sampling Rate(KHz)

- Configure motion detection.


Motion detection detects object motion in the detection area during the set period. The motion detection settings may vary with device. The following takes NVR channel as an example:


Current Channel


Motion Detection On Off



Detection Area Arming Schedule Trigger Actions

Sensitivity Low High

 Draw Area


 Clear All



Item	Description																																																																																																																														
Detection Area	Click Draw Area to draw detection area in the left live view window.																																																																																																																														
Sensitivity	The higher the value, the easier a moving object will be detected.																																																																																																																														
Trigger Actions	Set the actions to trigger after a motion detection alarm occurs.																																																																																																																														
Arming Schedule	<p>Set the start and end time during which motion detection takes effect.</p> <p> Edit  Reset</p> <table border="1"> <tr> <td></td> <td>0</td> <td>2</td> <td>4</td> <td>6</td> <td>8</td> <td>10</td> <td>12</td> <td>14</td> <td>16</td> <td>18</td> <td>20</td> <td>22</td> <td>24</td> </tr> <tr> <td>Mon</td> <td colspan="13"></td> </tr> <tr> <td>Tue</td> <td colspan="13"></td> </tr> <tr> <td>Wed</td> <td colspan="13"></td> </tr> <tr> <td>Thu</td> <td colspan="13"></td> </tr> <tr> <td>Fri</td> <td colspan="13"></td> </tr> <tr> <td>Sat</td> <td colspan="13"></td> </tr> <tr> <td>Sun</td> <td colspan="13"></td> </tr> <tr> <td>Holiday</td> <td colspan="13"></td> </tr> </table> <ul style="list-style-type: none"> • Click or drag on the green area to set arming periods. • Click Edit to enter time periods manually. After you complete the settings for a day, you may copy the settings to other days. 		0	2	4	6	8	10	12	14	16	18	20	22	24	Mon														Tue														Wed														Thu														Fri														Sat														Sun														Holiday													
	0	2	4	6	8	10	12	14	16	18	20	22	24																																																																																																																		
Mon																																																																																																																															
Tue																																																																																																																															
Wed																																																																																																																															
Thu																																																																																																																															
Fri																																																																																																																															
Sat																																																																																																																															
Sun																																																																																																																															
Holiday																																																																																																																															

View Device Info

View device information, including device name, model, IP, port, serial number, version info, etc.

1. Click **Device Cfg.** or **Channel Cfg.** or **Maintenance** on the main menu.
2. Click  in the **Operation** column.




NOTE!

Device info is also displayed for devices not logged in, but subnet mask and gateway will not be displayed.

Export Device Info

Export information including name, IP, model, version, MAC address and serial number of device(s) to a CSV file.

1. Click **Device Cfg.** or **Channel Cfg.** on the main menu.
2. Select the device(s) in the list, and then click the **Export** button in the upper right corner.

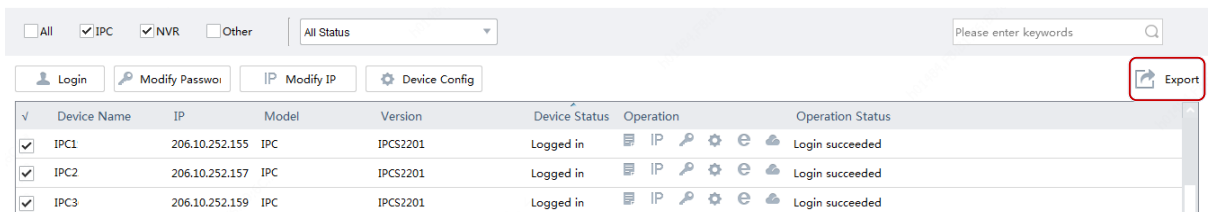


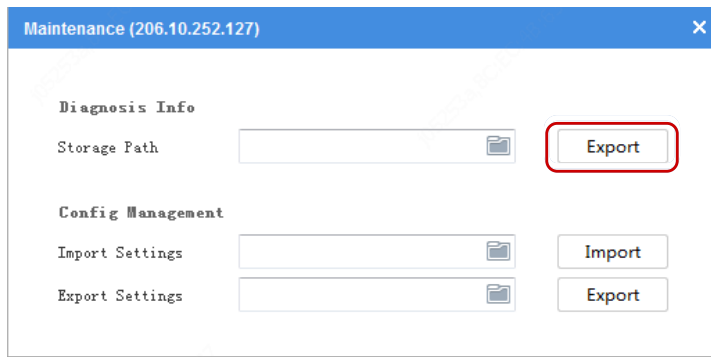
The screenshot shows a web interface for device management. At the top, there are filter options: All, IPC, NVR, Other, and a dropdown menu set to 'All Status'. A search bar on the right contains the text 'Please enter keywords'. Below the filters are buttons for 'Login', 'Modify Password', 'IP Modify IP', and 'Device Config'. In the top right corner, there is a red-bordered 'Export' button. The main area contains a table with the following columns: Device Name, IP, Model, Version, Device Status, Operation, and Operation Status. Three devices are listed, all with 'Login succeeded' status.

Device Name	IP	Model	Version	Device Status	Operation	Operation Status
IPC1	206.10.252.155	IPC	IPCS2201	Logged in	IP	Login succeeded
IPC2	206.10.252.157	IPC	IPCS2201	Logged in	IP	Login succeeded
IPC3	206.10.252.159	IPC	IPCS2201	Logged in	IP	Login succeeded

Export Diagnosis Info

Diagnosis information includes logs and system configurations. You can export diagnosis info of device(s) to PC.


1. Click **Maintenance** on the main menu.
2. Click  in the **Operation** column.
3. Select the destination folder, and then click **Export**.



Configuration Import/Export

Configuration import allows you to import a configuration file from your computer to a device and change the current settings of the device.

Configuration export allows you to export current configurations of the device and save them as a file for backup.

1. Click **Maintenance** on the main menu.
2. Choose the following methods as needed:
 - For a single device: Click  in the **Operation** column.
 - For multiple devices: Select the devices, and then click **Maintenance** on the top toolbar.

Login Restart Restore Maintenan ²							
✓	Device Name	IP	Model	Version	Device Status	Operation	Operation Status
✓	206.10.252.134	206.10.252.134	IPC2	IPC_D	Logged in	IP [wrench] [refresh] [cloud]	Login succeeded
✓ ¹	206.10.252.150	206.10.252.150	IPC2	IPC_2	Logged in	IP [wrench] [refresh] [cloud]	Login succeeded
✓	206.10.252.151	206.10.252.151	IPC2	IPC_2	Logged in	IP [wrench] [refresh] [cloud]	Login succeeded
✓	206.10.252.154	206.10.252.154	IPC2	IPC_2	Logged in	IP [wrench] [refresh] [cloud]	Login succeeded


Restore Default Settings

Restoring default settings includes restore defaults and restore factory defaults.


Restore defaults: Restore factory default settings except network, user and time settings.

Restore factory defaults: Restore all factory default settings.

1. Click **Maintenance** on the main menu.
2. Select the device(s).
3. Click **Restore** on the top toolbar and then choose **Restore Defaults** or **Restore Factory Defaults**.

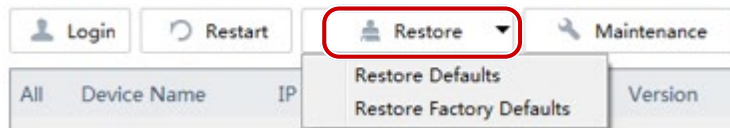


Restart Device

1. Click **Maintenance** on the main menu.
2. Choose the following methods as needed:
 - For a single device: Click  in the **Operation** column.
 - For multiple devices: Select the devices, and then click **Restart** on the top toolbar.

✓	Device Name	IP	Model	Version	Device Status	Operation	Operation Status
✓	206.10.252.134	206.10.252.134	IPC2	IPC_D	Logged in	IP [key] [gear] [e] [cloud]	Login succeeded
✓	206.10.252.150	206.10.252.150	IPC2	IPC_2	Logged in	IP [key] [gear] [e] [cloud]	Login succeeded
✓	206.10.252.151	206.10.252.151	IPC2	IPC_2	Logged in	IP [key] [gear] [e] [cloud]	Login succeeded
✓	206.10.252.154	206.10.252.154	IPC2	IPC_2	Logged in	IP [key] [gear] [e] [cloud]	Login succeeded

Log in to the Web of a Device

1. Click **Device Cfg.** or **Channel Cfg.** on the main menu.
2. Click  in the **Operation** column.

Upgrade Device

Device upgrade includes local upgrade and online upgrade. Upgrade progress is displayed in real time during the upgrade.

Local upgrade: Upgrade device(s) using an upgrade file on your computer.

Online upgrade: With Internet connection, online upgrade will check the device firmware version, download upgrade files and upgrade the device. You need to log in first.

Local Upgrade		Online Upgrade				
All	IP	Model	Version	Device Status	Upgrade Progress	Operation Status
<input checked="" type="checkbox"/>	206.10.252.150	IPC22	IPC_220	Online	--	Logged in
<input checked="" type="checkbox"/>	206.10.252.155	IPC22	IPC_220	Online	--	Logged in
<input checked="" type="checkbox"/>	206.10.252.159	IPC22	IPC_220	Online	--	Logged in
<input checked="" type="checkbox"/>	206.10.252.162	IPC22	IPC_220	Online	--	Logged in
<input checked="" type="checkbox"/>	206.10.252.166	IPC32	IPC_220	Online	--	Logged in
<input checked="" type="checkbox"/>	206.10.252.167	IPC22	IPC_220	Online	--	Logged in

Upgrade



NOTE!

- The upgrade version must be correct for the device. Otherwise, exceptions may occur.
- For an IPC, the upgrade package (ZIP file) must contain the complete upgrade files.
- For an NVR, the upgrade file is in .BIN format.
- You can upgrade NVR channels in batches.
- Please maintain a proper power supply during upgrade. The device will restart after the upgrade is completed.

Upgrade a device using a local upgrade version file

1. Click **Upgrade** on the main menu.
2. Under **Local Upgrade**, select the device(s) and then click **Upgrade**. A dialog box is displayed (take NVR as an example).

Local Upgrade (206.10.251.130) X


All	IP/Channel	Device/Channel Na	Model	Current Version
<input checked="" type="checkbox"/>	206.10.251.130	NVR3	NVR3	B3
<input type="checkbox"/>	206.10.251.130_C...	F Zone	IPC2	IPC_2
<input type="checkbox"/>	206.10.251.130_C...	D Zone	IPC2	IPC_2
<input type="checkbox"/>	206.10.251.130_C...	C Zone	IPC2	IPC_D1

Upgrade File Please choose the correct upgrade file.

3. Select the upgrade version file. Click **OK**.

Online Upgrade

1. Click **Upgrade** on the main menu.
2. Under **Online Upgrade**, select the device(s) and then click **Upgrade**.

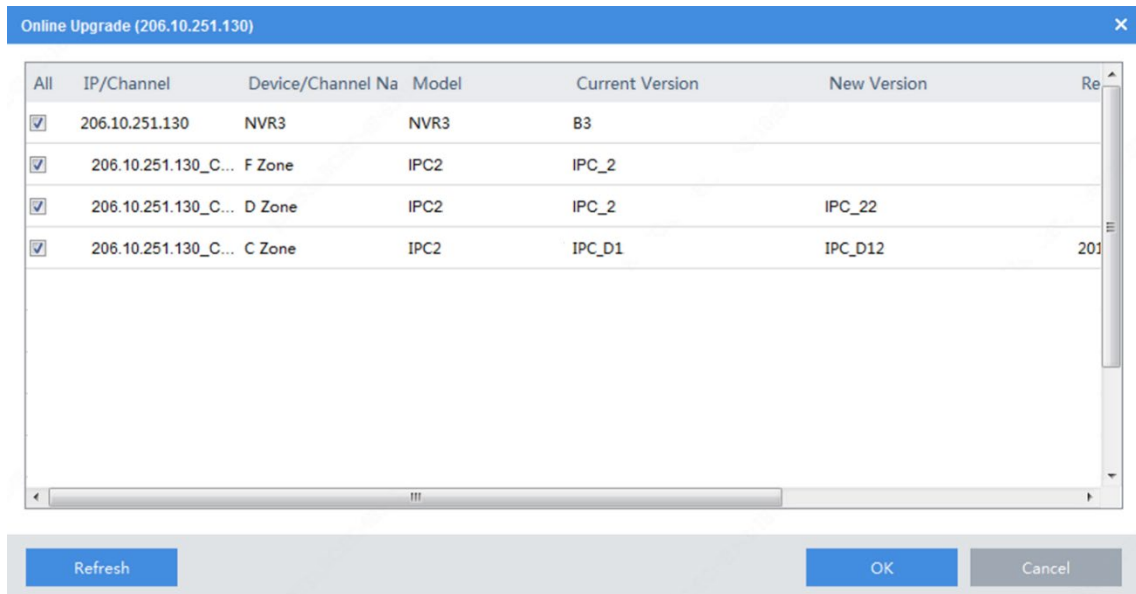


3. Click **Refresh** to check for available upgrades.
4. Click **OK**.

NVR Channel Management

NVR channel management includes adding NVR channel and deleting NVR channel.

1. Click **NVR** on the main menu.
2. On the **Online** tab, select the IPC(s) to import, select the target NVR, and then click **Import**.

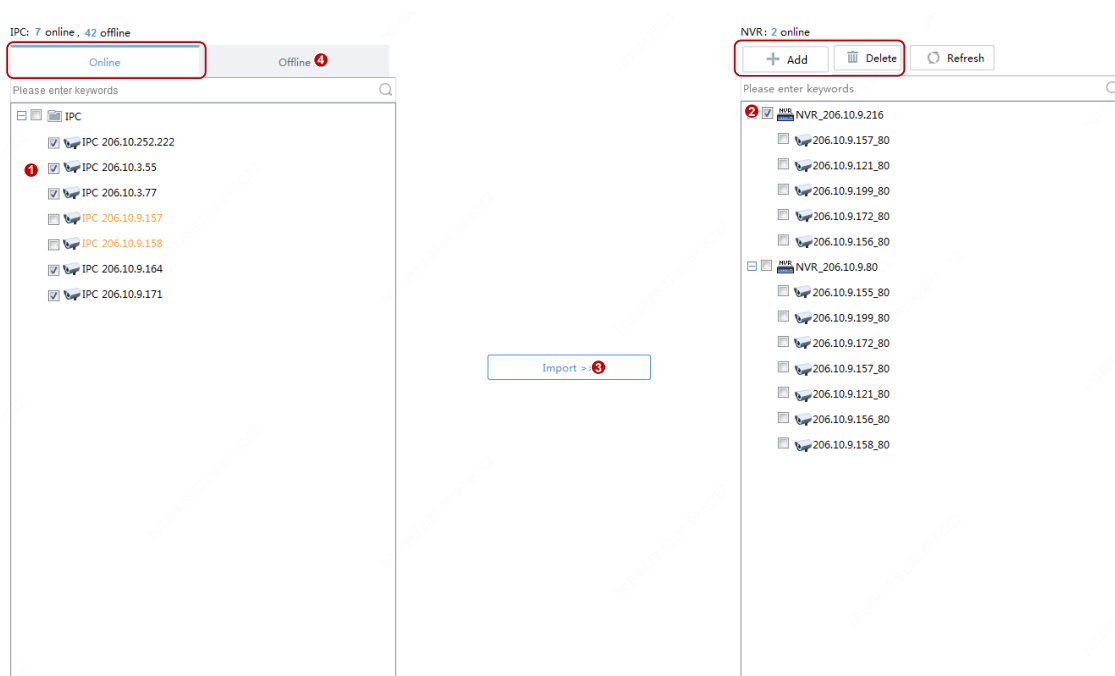


NOTE!

- In the IPC list, orange means the IPC has been added to an NVR.
- In the NVR list, blue means the newly added channel.
- To add an offline IPC, click the **Offline** tab (4 in the figure). The IPC's username and password are required.




NOTE!

- Use the **Add** button on the top if the IPC you want to add is not in the IPC list.
- To delete an IPC from the NVR list, place the mouse cursor on the IPC and click . To delete multiple IPCs in batches, select the IPCs and then click **Delete** on the top.

Cloud Service

Enable or disable the cloud service and the **Add Without Signup** feature on the device; delete a cloud device from the current cloud account.

1. Log in to the device.
2. Click **Device Cfg.** or **Maintenance** on the main menu.
3. Click  in the **Operation** column. A dialog box is displayed.

Cloud Service (192.168.20.108)✕

P2P: On Off


Server Address: www.myrevocloud.com

Register Code:

Username: smbtestR

Device Status: ■ Online Delete

Service Agreement: <http://www.myrevocloud.com/doc/termsofservice.html>

Scan QR Code: 

Refresh

4. Enable or disable the cloud service (P2P) as needed. When the cloud service is enabled, you can use the APP to scan the QR code below to add the device.

Note: Please click **Refresh** to update device status after you enable or disable the cloud service.

5. Enable or disable the **Add Without Signup** feature, which, when enabled, allows you to add the device by scanning the QR code using the APP without signing up for a cloud account.

Note: The **Add Without Signup** feature requires the cloud service be enabled on the device and a strong password be set on the device.

6. For a cloud device, you can remove it from the current cloud account by clicking **Delete**.

Calculation

Calculate recording time allowed or disks needed.

1. Click **Calculation** on the main menu.
2. Click **Add** on the top toolbar.

Add
✕

Channel Number

Compression

Resolution

Frame Rate

Smart Encoding

Environmental Complexity

Bit Rate(Kbps)

Best Bit Rate(Kbps) 4096

OK
Cancel

Note: You may also click **Search to Add** and select discovered devices for space calculation based on their actual video settings.

3. Complete the settings. Click **OK**.
4. Repeat the above steps as needed.

Total 51 device(s)
 Refresh
 Search Setup

Add
 Edit
 Delete
 Search to Add

√	Compression	Channels	Resolution	Frame Rate(fps)	Bit Rate(Kbps)	Total Bandwidth(Kbps)
<input checked="" type="checkbox"/>	H.264	10	1920×1080(1080P)	25	4096	40960
<input checked="" type="checkbox"/>	H.264	6	1280×720(720P)	25	2048	12288

5. Select devices in the device list.

Calculate days in disk mode

Calculate how many days recordings can be saved based on the daily recording time (hours) and disk capacity available.

Calculate Days Calculate Disks

Daily Recording: 24 ¹ Hour(s)

Space Needed: 548.4 GB ²

Disk Mode RAID Mode

Disk Capacity: 10 TB

Usable Space: 9094.9 GB

Recording Time:

16 Days

Calculate days in RAID mode

Calculate how many days recordings can be saved based on the daily recording time (hours), configured RAID type (0/1/5/6), RAID disk capacity, and the number of disks available.

Calculate Days Calculate Disks

Daily Recording: 24 ¹ Hour(s)

Space Needed: 548.4 GB ²

Disk Mode RAID Mode

Disk Capacity: 10 TB

RAID Type: RAID 5

RAID Disks: 5

Usable Space: 36379.7 GB

Recording Time:

66 Days

Calculate disks in disk mode

Calculate how many disks are needed based on the daily recording time (hours), recording retention period (days), and disk capacity available.

Calculate Days Calculate Disks

Retention Time: 30 Day(s) ¹


Daily Recording: 24 Hour(s)

Space Needed: 16453.1 GB

Disk Mode RAID Mode ²

Disk Capacity: 10 TB

Disks Needed:

 X 2

Usable Space: 18189.9 GB

Calculate disks in RAID mode

Calculate how many RAID disks are needed based on the daily recording period (hours), recording retention period (days), RAID disk capacity available, and configured RAID type.

The screenshot shows a web interface for calculating RAID disks. It has two tabs: 'Calculate Days' and 'Calculate Disks'. The 'Calculate Disks' tab is active and contains the following fields:

- Retention Time:** 30 Day(s)
- Daily Recording:** 24 Hour(s)
- Space Needed:** 16453.1 GB
- Mode:** RAID Mode (selected)
- Disk Capacity:** 10 TB
- RAID Type:** RAID 5
- RAID Disks:** 3 (indicated by a server icon and the number 3)
- Usable Space:** 18189.8 GB

Tips for Usage

Select Devices


Select a device by selecting the check box in the first column of the list.

To select multiple devices:

- Select devices one by one.
- Click **All** to select all.
- Click to select devices while holding down **<Ctrl>**.
- Click to select devices while holding down **<Shift>**.
- Drag the mouse while holding down the left button.

Filter Device List

Filter the list by entering a keyword contained in the IP, model, version, and name of the desired devices.


Click  to clear entered keywords.

Sort Device List

In the device list, click a column title, for example, device name, IP, or status, to sort the listed devices in ascending or descending order.

Customize Device List

Click **Search Setup** on the top, then select titles to display on the device list.

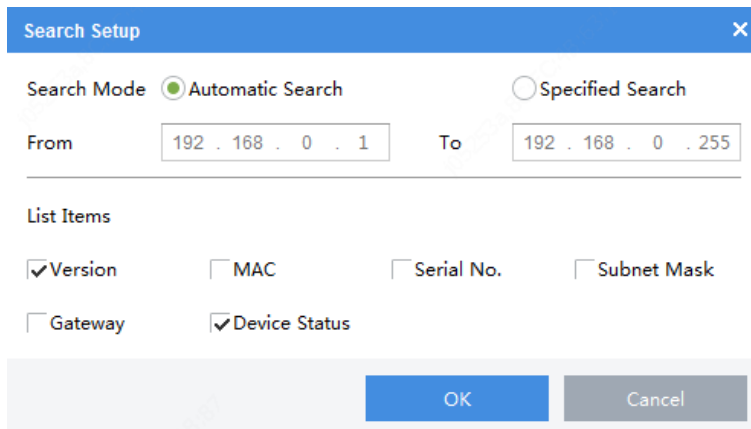

Search Setup

Search Mode Automatic Search Specified Search

From To

List Items

Version MAC Serial No. Subnet Mask

Gateway Device Status

OK Cancel

Copy NVR Channel Configurations

You can copy image, encoding, OSD and motion detection configurations of an NVR channel to other channels of the NVR.




NOTE!

This feature only supports NVR channels that are connected via private protocol.

- Image parameters: Include settings of image enhancement, exposure, smart illumination and white balance.
- Encoding parameters: Depending on the stream type that the device supports, you can choose to copy encoding parameters of the main and/or sub streams.
- OSD parameters: OSD style.
- Motion detection parameters: Detection area, arming schedule.

The following describes how to copy encoding configurations. Copying image, OSD and motion detection configurations are similar.

First, complete the configuration of the channel to copy from (e.g., Channel 001) and save the settings. And then follow the steps as illustrated:

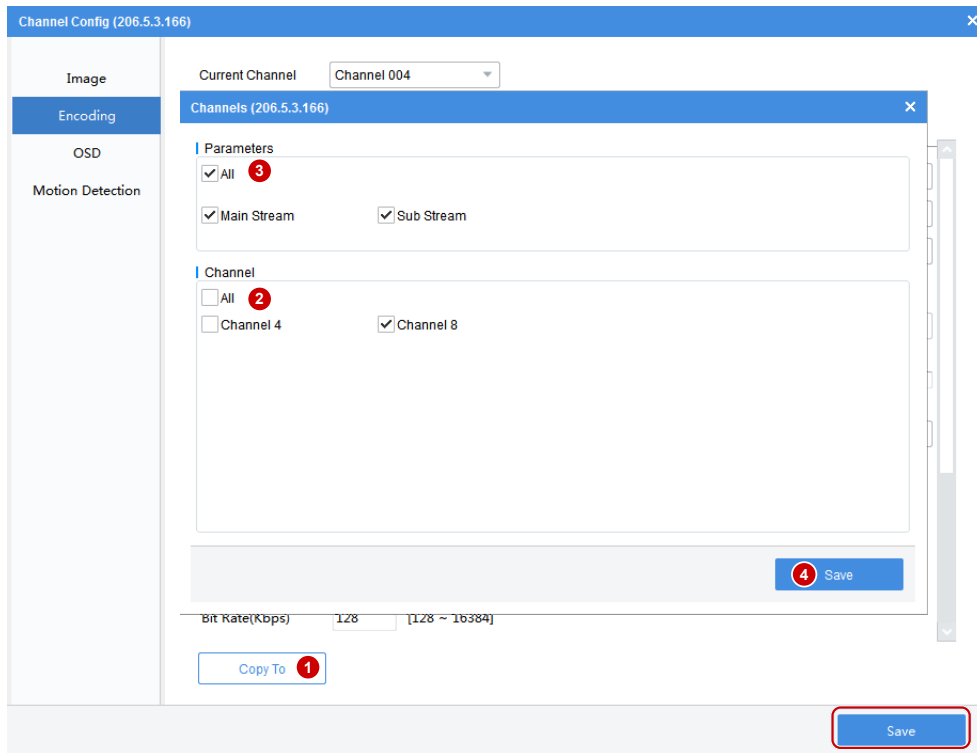

Export and Import OSD Configurations of an IPC

You can export OSD configurations of an IPC to a CSV file for backup, and apply the same configurations to other IPCs by importing the CSV file. The OSD configurations include effect, font size, font color, minimum margin, date & time format, OSD area settings, types and OSD contents.

Channel Config (203.6.1.181)


Image

Encoding

OSD

Audio

Motion Detection



✓	No.	Position	Overlay OSD Content
<input checked="" type="checkbox"/>	1	Area1	<Date & Time>
<input type="checkbox"/>	2	Area2	
<input type="checkbox"/>	3	Area3	
<input type="checkbox"/>	4	Area4	
<input type="checkbox"/>	5	Area5	
<input type="checkbox"/>	6	Area6	<Date>
<input type="checkbox"/>	7	Area7	<Time>
<input type="checkbox"/>	8	Area8	<Time>

Overlay Area8

X Y Aligning

Export
Import



NOTE!

When importing a CSV file, make sure the IP addresses and serial numbers in the file match that of the target IPCs; otherwise, import will fail.

Panasonic i-PRO Sensing Solutions Co., Ltd. i-PRO, Viewnetcam.com, FacePRO, Advitia, VideoInsight, Arbitrator, ClouDE, and Unified Digital Evidence are registered trademarks or trademarks of Panasonic i-PRO Sensing Solutions Co., Ltd. or Panasonic i-PRO Sensing Solutions Corporation of America in various jurisdictions. All other trademarks are the property of their respective owners.