

# Available function list for each compatible device

No.	Function		Recorder						Encoder			Camera									
			ND300	ND200	HD300	RT416†1	ND400	HD616 HD716	NT304	NT314	GXE500	NP472†2	NS32*†3	NW47*†3	NP24* NP100* NF28*	NS202 NS202A	NW48*	NS95* NW96*	NP304 NF302	NP502 NW502	SP302 SP305 SP308 SP332 SP335 SF336
1	Operation window	Status bar	Recorder title (encoder title) display																		
2			Camera title display																		
3			ALM (Alarm display/reset)																		
4			ERR (Error display/reset)																		
5			SD (Obtain SD memory data)																		
6			Audio (reception)																		
7			Audio (transmission)																		
8			LIVE (Live image)																		
9			PLAY (Playback image)																		
10			SD PLAY (Playback image of SD memory data)																		
11			REC indicator (Currently recording)																		
12			COPY (Currently copying)																		
13			DELETE (Currently deleting)																		
14			Time & date																		
15	Information display area	REC indicator (Currently recording)																			
16		Camera title display																			
17	Function panel	Time & date																			
18		Device tree																			
19	Group																				
20	Sequence																				
21	Quick playback	Go to date																			
22		Go to last																			
23		SD memory																			
24	Search	Search result list playback																			
25		Group playback																			
26		Download																			
27	Download	Download																			
28		Viewer																			
29		Audio																			
30	SD memory																				
31	Alarm log	Display logs																			
32		Playback from the alarm log list																			
33	Device error log	Display logs																			
34		Network error log																			
35	Camera operation panel	Zoom																			
36		- (Wide)																			
37		+ (Tele)																			
38		x1 (Zoom reset)																			
39		Focus	Near																		
40			Far																		
41			Auto																		
42		Auto mode	Auto track																		
43			Auto pan																		
44			Preset sequence																		
45			Sort																		
46		Patrol																			
47		Pan/tilt operation	- (Darker)																		
48			+ (Brighter)																		
49	Reset																				
50	Preset	Go																			
51		Program																			
52	AUX	AUX1 Open																			
53		AUX1 Close																			
54		AUX2 Open																			
55		AUX2 Close																			
56		AUX3 Open																			
57	AUX3 Close																				



- †1: When using the RT416, read the provided "Precautions when using the WV-ASM100 with the WJ-RT416" (PDF) in advance. It contains noteworthy descriptions for an administrator.
- †2: It is necessary to select "ON" for the "User authentication" setting of the camera to operate or to display live images.
- †3: It is necessary to select "ON" for the "User authentication" setting of the camera to operate the cameras.
- †4: Alarm operation and error operation will be canceled at the same time. (Firmware version of the ND300 shall be 4.69 or earlier.)
- †5: When obtaining the SD memory data using the ND200 whose firmware version is 2.00 or later, no user will be forcibly logged out and any recording will not stop.
- †6: The "SD" icon will not be displayed. Obtainment of the SD memory data will automatically be performed.
- †7: Audio can be heard from the following cameras (or encoders).
- Camera (or encoder) from which live images are being received directly and displayed (Direct image reception)
- †8: Firmware version of the ND200 shall be 2.10 or later.
- †9: Recorded audio can be heard during playback.
- †10: Firmware version of the NT304 shall be 1.11 or later.
- †11: The audio transmission/reception function is available only for CH1.
- †12: Firmware version of the NS202 shall be 2.10 or later.
- †13: Firmware version of the NS202A shall be 2.10 or later.
- †14: Depending on the settings of the camera, audio reception from the camera will be available even when during audio transmission.
- †15: Live audio can be transmitted to the following cameras (or encoders).
- Camera (or encoder) from which live images are being received directly and displayed (Direct image reception)
- †16: Time and date will not be displayed when receiving and displaying live images from the camera directly (Direct image reception). (NP472, NS32\*, NW47\*, NP100\*)
- †17: Command alarm will not be logged.
- †18: Time and date of logs will be displayed without "" even during the daylight saving time period.
- †19: Firmware version of the ND300 shall be 4.40 or later.
- †20: Firmware version of the ND200 shall be 2.00 or later.
- †21: Operation differs depends on the auto mode setting of the analog camera connected to the recorder or the encoder.
- †22: "Patrol 1" to "Patrol 4" is available.
- †23: Operable only when the displayed image is being zoomed.
- †24: It is necessary to select "ON" for the "User authentication" setting of the camera (or encoder) to register preset positions for the following cameras (or encoders).
- Camera (or encoder) that is not registered in the recorder
  - Camera (or encoder) from which live images are being received directly and displayed (Direct image reception)
- †25: Inoperable when using the WV-ASM100L.
- †26: Refer to the operating instructions of the ND400 for the cameras compatible with the VMD search function.
- †27: Available only when receiving camera images directly from the cameras. (NS202A, NS95\*, NW96\*)
- †28: AVMD information will be displayed only when displaying JPEG images.
- †29: Firmware version of the ND300 shall be 4.50 or later.
- †30: Sometimes, it may take time to perform panning/tilting operation or zooming operation. Providing notifications of alarm occurred during operation of the system controller may also take time.
- †31: Operable only when displaying live images.
- †32: Firmware version of the NP24\* shall be 1.30 or later, and firmware version of the NF28\* shall be 1.10 or later. The NP100\* is unsupported.
- †33: Firmware versions of the NS202 and NS202A shall be 2.20 or later.
- †34: Firmware version of the NW48\* shall be 1.10 or later.
- †35: Firmware versions of the NS95\* and NW96\* shall be 1.10 or later.
- †36: Inoperable when using the NS202.
- †37: When the NS95\* or NW96\* is connected, "Patrol 1" to "Patrol 4" is available.
- †38: When fast reverse playback is performed during playback, playback speed will be displayed from Step1 → Step2 → Step3 ...
- †39: Firmware version of the NT304 and NT314 shall be 3.12 or later.