

# Addendum for WV-CU950 Operating Instructions: Setting for Video Surveillance Software (WV-ASM300 Series)

When Video Surveillance Software (WV-ASM300 Series) is installed on a PC that is controlled by this system controller via the 10/100 BASE-T port, the following controller settings are required.

## Note:

Refer to WV-ASM300 Operating Instructions for details on connections and operations.

## Setup Procedures (Hardware)

### ■ Setup Procedures

Perform the setup as follows.

1. Set the MODE switches.  
You will set up the communication mode. (Refer to MODE Switch Setting.)
2. Set controller NO. switches.  
(Refer to CONTROLLER NO. Switch Setting.)
3. Perform WV-CU950 setups after entering the administrator password. (Refer to Network Setting.)

**Note:** Before performing WV-CU950 setups, you need to log into the system by entering the administrator password. (Refer to the operating instructions.)

### ■ MODE Switch Setting

You will perform the setting of the MODE switches at the rear panel.


## Notes:

- Before the setting, turn off the system controller. (Refer to the operating instructions.)
- Do not move the MODE switches to positions other than described in these illustrations. That may cause malfunction.

### ● Setting for Connection with Video Surveillance Software (WV-ASM300 Series)

#### Ethernet mode

To apply this mode, set the MODE Switch #1, #4 and #5 to ON.

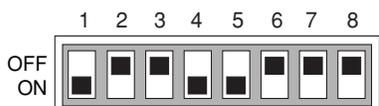

**Note:** Refer to the operating instructions of connected devices for details on connections and operations.

### ■ CONTROLLER NO. Switch Setting

You will determine controller-number settings by moving the CONTROLLER NO. switch at the rear panel.

### ● Setting for Connection with Video Surveillance Software (WV-ASM300 Series)

Maintain the switch setting as "1 (factory default position)".



### ■ Network Setting

## Notes:

- Before performing the network setting, set the operation mode to the Ethernet mode. (Refer to "MODE Switch Setting".)
- When the all reset mode is activated, the network setting is reset to the factory default. (Refer to the operating instructions for details on all reset.)
- In this document, grayed areas on the illustrations mean blinking.

Perform the network setting in the following procedure.

1. Turn off the power.
2. Turn on the power while holding down the 0, MON (ESC), and CAM (SET) buttons.  
"Admin Password" will appear on the LCD to enter the password.



3. Enter the administrator password.  
The password entered will be displayed as "\*" marks.



## Notes:

- The factory default is "650".
- To delete a character, press the CLEAR button.

4. Press the CAM (SET) button.

If the password entered is correct, "IP Address" setting form will appear on the LCD.

```
IP Address
192.168.  0.210
```

**Note:** If the password entered is wrong, "IP Addr Setup Mode" will appear on the LCD again to reenter the password.

5. Select an item you wish to set up by rotating the JogDial. Then, press the CAM (SET) button.

#### IP Address

```
IP Address
192.168.  0.210
```

The IP address of system controller  
The factory default is "192.168.0.210".

#### Subnet Mask

```
Subnet Mask
255.255.255.  0
```

The subnet mask of system controller  
The factory default is "255.255.255.0".

#### Gateway

```
Gateway
192.168.  0.  1
```

The default gateway of system controller  
The factory default is "192.168.0.1".

#### Keyboard ID

```
Keyboard ID
1
```

(No need for setup) Remain the factory default.  
The factory default is "1".

#### Server IP Address

```
Server IP Address
192.168.  0.200
```

The IP address of connected PC  
The factory default is "192.168.0.200".

#### Server ID

```
Server ID
1
```

(No need for setup) Remain the factory default.  
The factory default is "1".

6. When setting "IP Address", "Subnet Mask", "Gateway", or "Server IP Address", move the cursor to a position to be edited by rotating the shuttle ring clockwise or counterclockwise.

```
IP Address
192.168.  0.210
```

7. Enter the desired address (nnn.nnn.nnn.nnn) by pressing the numeric buttons. (Available value for "nnn": 0 to 255)

**Note:** If you have entered a wrong address, press the CLEAR button.

8. Press the MON (ESC) button.

The selected parameter will be determined, and the LCD display will return from the editing mode to the display mode. (Refer to Step 5.)

9. After you have completed the settings, turn off the power.