

HDD Viewer (Basic Procedure)

Preparation

- Set password for HDD viewer.
 - ◆ Go to [Setup] -> [Advanced setup] -> [Maintenance] -> [HDD information] -> [Set password for HDD viewer]
- Acquire HDD viewer software.
 - ◆ Go to [Setup] -> [Advanced setup] -> [Maintenance] -> [HDD information] -> [Save HDD viewer (to USB medium)]

1. Remove the HDD from the recorder

2. Connect the removed HDD to the PC

3. Search / Playback by HDD Viewer



i-PRO