


## Steps for camera angle adjustment (For WV-SPW631LT and WV-SPW631LTJ only)

1. Slightly loosen the tilting lock screw (about 15°).
2. The camera angle is adjustable. If a fine adjustment is necessary, perform the following steps:

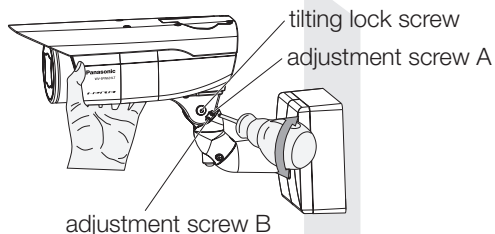


**When the camera is mounted on a wall (a fine upward adjustment is possible):**

Loosen adjustment screw B.

Tighten adjustment screw A, and then slightly tilt the camera upward.

After fine adjustment, tighten adjustment screw B.

Recommended tightening torque: 0.78 N·m {0.58 lbf·ft}

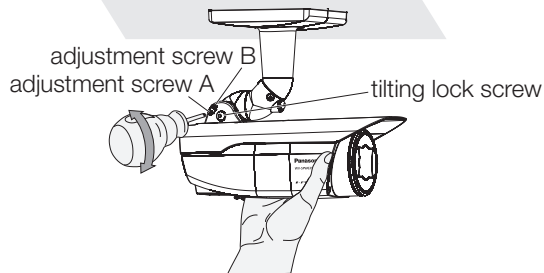

**When the camera is mounted on a ceiling (a fine downward adjustment is possible):**

Loosen adjustment screw B.

Tighten adjustment screw A, and then slightly tilt the camera downward.

After fine adjustment, tighten adjustment screw B.

Recommended tightening torque: 0.78 N·m {0.58 lbf·ft}

3. Tighten the tilting lock screw.


---

### Note:

- Adjustment is only possible in either downward or upward direction, depending on the factory settings.
- Since the adjustable direction is fixed, you need to readjust the angle by starting over from Step 1 when a fine adjustment is not possible.

## カメラ角度微調整手順 (WV-SPW631LT、WV-SPW631LTJ のみ)

1. チルトロックねじを少しゆるめます (15° ぐらい)。
2. カメラの角度は微調整ができます。微調整が必要な場合は下記手順に従って、調整します。

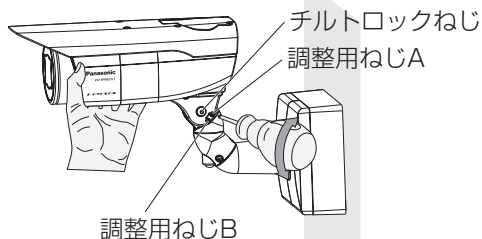


### 壁面に取り付ける場合 (上方向へ微調整可能)

調整用ねじBをゆるめます。

調整用ねじAを締め込んで、上方向に画角を微調整します。

微調整後、調整用ねじBを締め付けます。

(推奨締付トルク : 0.78 N・m {8 kgf・cm})

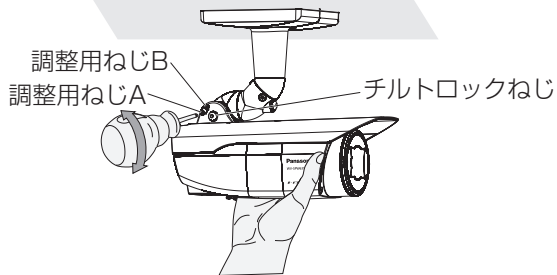

### 天井面に取り付ける場合 (下方向へ微調整可能)

調整用ねじBをゆるめます。

調整用ねじAを締め込んで、下方向に画角を微調整します。

微調整後、調整用ねじBを締め付けます。

(推奨締付トルク : 0.78 N・m {8 kgf・cm})

3. チルトロックねじを締め付けます。

### メモ

- 出荷状態によっては、下方向または、上方向のいずれかの方向しか調整できません。
- 調整できる方向が固定されているため、微調整できない場合は、手順1から再度、調整をしないする必要があります。