


### **Installation Guide**

Included Installation Instructions

# Ceiling Mount Bracket Model No. WV-QEM506

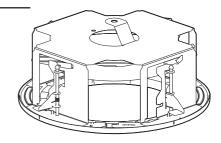

- Before attempting to connect or install this product, please read these instructions carefully and save this manual for future use.
- The external appearance and other parts shown in this manual may differ from the actual product within the scope that will not interfere with normal use due to improvement of the product.

i-PRO Co., Ltd. assumes no responsibility for injuries or property damage resulting from failures arising out of improper installation or operation inconsistent with this documentation.

"<Control No.: C\*\*\*\*>" used in these documents should be used to search for information on our technical information website (https://i-pro.com/global/en/surveillance/training-support/support/technical-information) and will guide you to the right information.



i-PRO Co., Ltd.

https://www.i-pro.com/

#### Caution:

 Before attempting to connect or operate this product, please read these instructions carefully.

#### Notice:

- This product is not suitable for use in locations where children are likely to be present.
- Do not install this product in locations where ordinary persons can easily reach.
- For information about screws and other parts required for installation, refer to the corresponding section of this document.

### **Precautions**

- Do not use this bracket except with suitable cameras.
  - Failure to observe this may cause a drop resulting in injury or accidents.
- Refer installation work to the dealer.
  - Installation work requires technique and experience. Failure to observe this may cause fire, electric shock, injury, or damage to the product.
  - Be sure to consult the dealer.
- Take measures of protection against this product falling.
  - Failure to observe this may cause a drop resulting in injury or accidents. Be sure to install the safety wire.
- The screws and bolts must be tightened to the specified torque.
  - Failure to observe this may cause a drop resulting in injury or accidents.
- Install the product accurately and securely on a ceiling in accordance with the installation instructions.
  - Failure to observe this may cause injury or accidents.
- Do not rub the edges of metal parts with your hand.
  - Failure to observe this may cause injury.

When using this product, also read the "Precautions" described in the operating instructions for the camera to be attached.

### **Preface**

This product is a ceiling embedded bracket that is designed to mount the network camera on a ceiling. This bracket can be used for an area with weak pull-out strength such as plasterboard in a double ceiling, and the embedded type makes the visible part of the camera smaller.



The latest information about the supported cameras <Control No.:C0501>.

### **Specifications**

Ambient operating	–50 °C to +60 °C (–58 °F to +140 °F)		
temperature:			
Dimensions:	ø328 mm × 153 mm (H)* {ø12-29/32 inches × 6-1/32 inches}		
	*Including decorative cover thickness: 17.5 mm {11/16 inches}		
Mass:	Approx. 2.0 kg {4.42 lbs}		
Finish:	Main body: Surface treatment steel sheet		
	Decorative cover: ABS resin i-PRO white <wv-qem506-w> Black <wv-qem506-b></wv-qem506-b></wv-qem506-w>		

### **Precautions for installation**

- In order to prevent injury, the product must be securely mounted to the ceiling according to the Installation Guide.
- This product is designed to be used indoors.


This product is not operable outdoors. Do not expose this product to direct sunlight for hours and do not install the product near a heater or an air conditioner. Otherwise, it may cause deformation, discoloration and malfunction. Keep this product away from water and moisture.

#### ■ Installation area for this product

Make sure that the installation area is strong enough to hold the total weight of the camera assembly before installation. The installation area shall have 165 mm {6-1/2 inches} or more space behind the ceiling.

The thickness of the ceiling board for installation can range between 9 mm {11/32 inches} and 40 mm {1-9/16 inches}.

Make sure to remove this product if it will no longer be used.

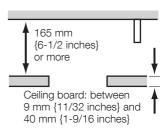

### **Standard Accessories**

Safety wire* 1 pc.	Fixing screw for attachment plate (M4 $\times$ 8 mm
Safety wire angle*1 pc.	{5/16 inches})5 pcs. (of them, 1 for spare)
	Template1 pc.
	Decorative cover1 pc.

<sup>\*</sup> The product is shipped in a state where the safety wire is attached to the safety wire angle.

### Other items that are needed (not included)

#### IMPORTANT

Prepare anchor bolts according to the material and strength of the area where the product is to be installed. The pull-out strength of the anchor bolt shall be more than 5 times of the total weight of the installed devices (including the camera body, ceiling mount bracket, anchor bolts, and all other parts).


<sup>\*</sup> One anchor is used for securing the mounting chassis, and the other anchor is used for connecting the safety wire. (See Step2)

### Installation

Refer to the operating instructions of the camera for details on the camera installation (including the camera mounting, cable connection and adjustment).


### Step 1

Create a Ø300 mm {11-13/16 inches} hole.

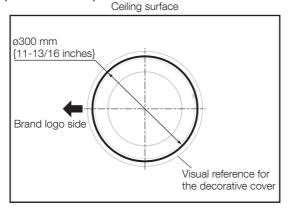

### Step 2 Install two anchor bolts (M10: locally procured) into the ceiling.

- ① Determine the anchor bolt length (for securing the mounting chassis) by use of Template (accessory).
- ② Position the nut (locally procured) by use of Template and mount the nut. (The distance between the bottom surfaces of the ceiling board and nut shall be 136 mm {5-11/32 inches}.)

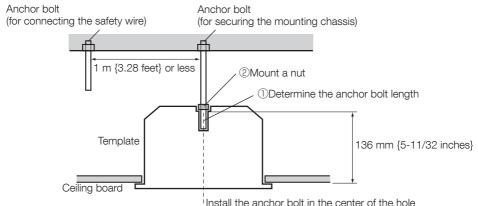


#### IMPORTANT:

• When the existing anchor bolt is used as an anchor bolt for connecting the safety wire, make sure that the distance between the anchor bolt and camera mounting position is 1 m {3.28 feet} or less.


# Secure the safety wire angle (accessory) to the anchor bolt (for connecting the safety wire), and connect the safety wire (accessory).

- ① Mount a nut so that the safety wire angle is secured on the anchor bolt.
- ② Remove the safety wire from the safety wire angle.
- ③ Insert the groove of the portion ① of the safety wire angle into the anchor bolt.
- 4 Close the safety wire angle while inserting the groove of the portion 2 of the safety wire angle into the anchor bolt.
- (5) Connect the safety wire to the safety wire angle again.
- ⑤ Engage the nut from beneath, and secure the safety wire angle with top and bottom nuts.
- ② Engage another nut from beneath to tighten and secure the nut that was engaged from beneath in ⑥ in a double nut fashion.

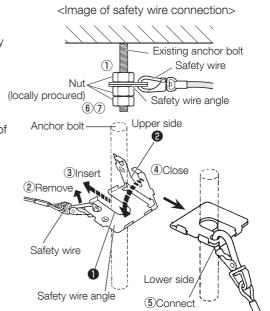


#### Note:

 When the existing anchor bolt that has been installed is used for connecting the safety wire, the use of 2 spacer nuts is helpful.



#### Attach the safety wire.

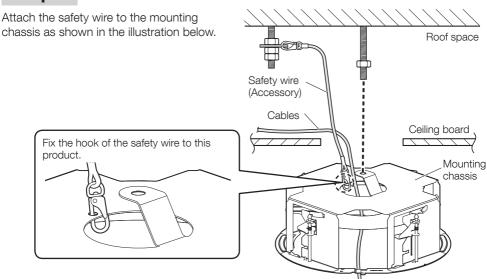


Installation onward for the descriptions of the cable and the safety wire may be omitted.


### Step 5

### Check the orientation for inserting the mounting chassis into the ceiling.

To align the i-PRO logo on the decorative cover, align the direction of the mounting chassis before inserting the mounting chassis into the mounting hole on the ceiling board.

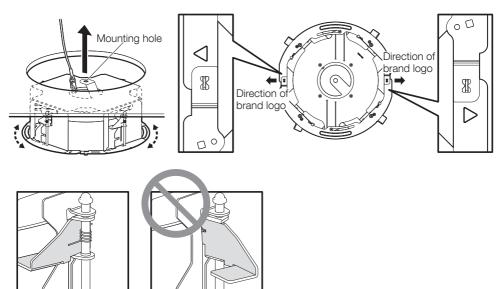


#### Secure the mounting chassis.

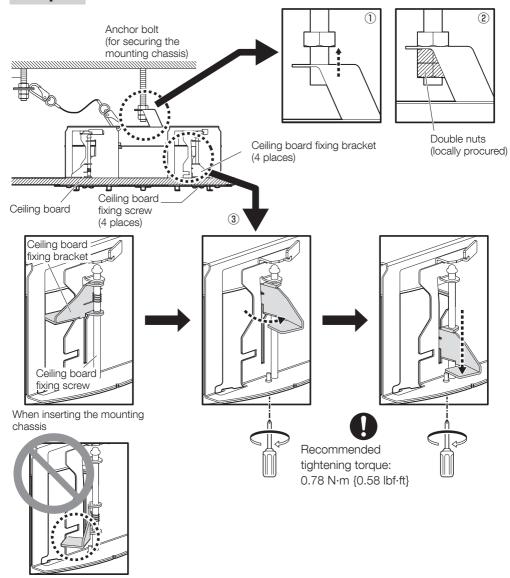


### Step 7 Pull of

### Pull out the camera mounting stage

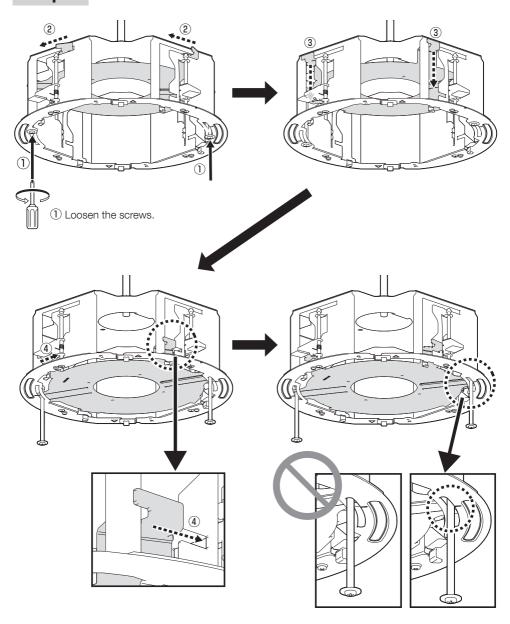

#### Install the attachment plate

#### ■ Camera mounting method

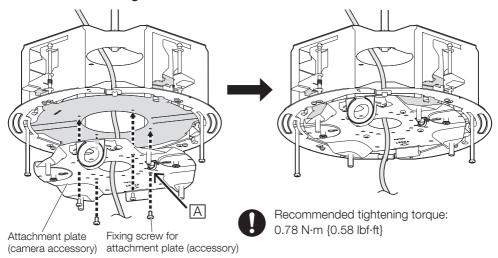







For Step 9, follow the installation procedure in the camera installation section or the installation procedure leaflet.

1.2 N·m {0.89 lbf·ft}

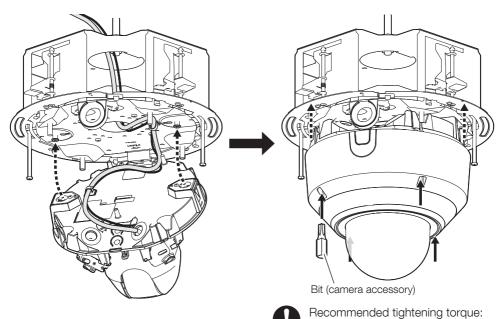

#### Mount the decorative cover.

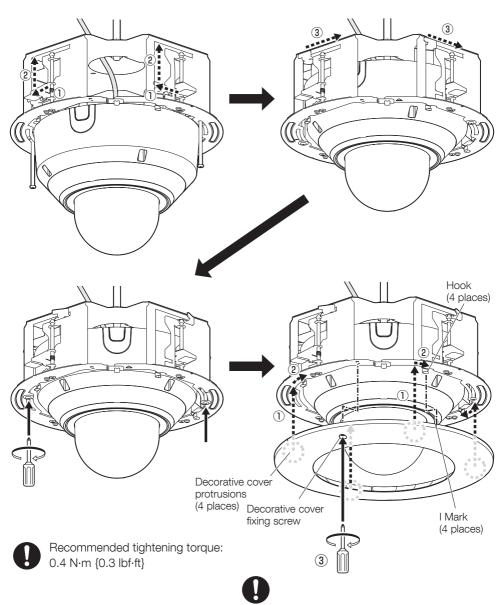


- Recommended tightening torque: 0.78 N·m {0.58 lbf·ft}
- There are two places where the decorative cover fixing screw can be fixed: the position shown in the illustration and the opposite side.

## **::i**·PRO

### 取扱説明書 設置ガイド

工事説明付き

### カメラ天井埋込金具 <sup>品番</sup> WV-QEM506

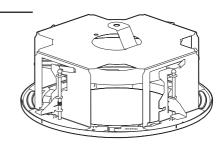

このたびは、弊社製品をお買い上げいただき、まことにありがとうございます。

- 取扱説明書をよくお読みのうえ、正しく安全にお使いください。
- ご使用前に「安全上のご注意」を必ずお読みください。
- この取扱説明書は大切に保存してください。
- 製品の改良などにより、ご使用上影響のない範囲で、記載されている外観などが実際の製品と異なる場合があります。

取扱説明書に記載されていない方法や、指定の部品を使用しない方法で施工されたことにより事故や損害が生じたときには、当社では責任を負えません。また、その施工が原因で故障が生じた場合は、製品保証の対象外となります。

i-PRO製品の「お問い合わせ」については、以下の弊社サポートウェブサイトを参照してください。

https://i-pro.com/jp/ja/support\_portal

※「日本エリア」でお使いの場合に限ります。日本以外でお使いの場合の サービスはいたしかねます。



取扱説明書に記載されている「<管理番号: Cxxxx>」は、以下の弊社技術情報ウェブサイト内で該当する情報を検索する際に使用する番号です。

https://i-pro.com/jp/ja/support\_portal/technical\_information



### i-PRO株式会社

https://www.i-pro.com/

#### 注意:

●取扱説明書をよくお読みのうえ、正しく安全にお使いください。

#### 注記:


◆本金具は子供がいる可能性のある場所での使用には適していません。


- ●一般の人が容易に触れることができる 場所への設置はしないでください。
- 設置に必要なねじやそのほかの部材など の情報については本書の該当部分を参照 してください。

### 安全上のご注意(必ずお守りください

人への危害、財産の損害を防止するため、必ずお守りいただくことを説明しています。

■ 誤った使い方をしたときに生じる危害や損害の程度を区分して、説明しています。





■ お守りいただく内容を次の図記号で説明しています。(次は図記号の例です)



してはいけない内容です。



実行しなければならない内容です。

### ⚠ 警告



■ 専用のカメラ以外は取り付けない (落下によるけがや事故の原因となります。)



■ 工事は販売店に依頼する

(工事には技術と経験が必要です。火災、感電、けが、器物損壊の原因となります。) ⇒ 必ず販売店に依頼してください。

■ 落下防止対策を施す

(落下によるけがや事故の原因となります。)

- ⇒ 落下防止ワイヤーを必ず取り付けてください。
- ねじやボルトは指定されたトルクで締め付ける (落下によるけがや事故の原因となります。)
- 設置の説明にしたがって天井に正しく、しっかり取り付ける (けがや事故の原因となります。)



■ 金属のエッジで手をこすらない

(強くこするとけがの原因となります。)

本金具をご使用の際は、取り付けるカメラの取扱説明書に記載された「安全上のご注意」とあわせてお読みください。

### 商品概要

本金具は、カメラ用の天井埋込金具です。二重天井で石こうボードなどのねじ引き抜き強 度が弱い場所に使用でき、カメラの露出部分を小さく見せるために埋込型になっています。



取り付け可能なカメラの最新情報

<管理番号: CO501>

### 什樣

使用温度範囲 -50 ℃~+60 ℃ 寸法 最大径:  $\phi$ 328 mm/高さ: 153 mm (飾りカバーの厚み17.5 mmを含む) 質量 約2.0 kg 什上げ 本体 : 処理鋼板

**飾りカバー:**ABS樹脂 i-PRO ホワイト <WV-QEM506-W>

ブラック < WV-QEM506-B>

### 設置上のお願い

■設置工事は電気設備技術基準に従って実施してください。

本金具の設置・接続を始める前に必要な周辺機器やケーブルを確認し、準備してください。 接続する前に、カメラ、PCなど接続する機器の電源を切ってください。


■傷害防止のため、本金具は、設置の説明に従って天井にしっかりと取り付ける 必要があります。

#### ■本機は屋内専用です

屋外での使用はできません。長時間直射日光の当たるところや、冷・暖房機の近くには設 置しないでください。変形・変色または故障・誤動作の原因となります。また、水滴や水 沫のかからない状態で使用してください。

#### ■本金具の取付場所について

- 設置場所は、カメラ取り付け時の総質量に十 分耐えられる強度を持っていることを確認し てから取り付けてください。
- 天井裏が165 mm以上ある場所に設置してく ださい。
- 天井板の厚さは、9 mm~40 mmまで取り 付けが可能です。

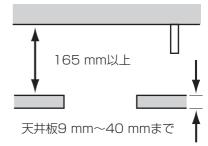

■本金具を使用しなくなった場合は放置せず、必ず撤去してください。

### 付属品をご確認ください

落下防止ワイヤー*1個	アタッチメント金具固定ねじ(M4×8 mm)
落下防止ワイヤーアングル*1個	5本(うち1本は予備)
	型紙1枚
	飾りカバー1個
※ 落下防止ワイヤーは落下防止ワイヤーアン	グルに取り付けた状態で出荷されています。

### 付属品以外に必要なもの

#### 重要


● 本金具を設置する場所の材質や強度に合わせてアンカーボルトを用意してください。アンカーボルトの引き抜き強度は、設置する機器(カメラ本体、カメラ天井埋込金具、アンカーボルト、その他すべての部品)の総重量の5倍以上を確保してください。

### 設置する

カメラの取り付け、ケーブルの接続、調整などの詳細はカメラの取扱説明書を参照してく ださい。

### Step 1

 $\phi$ 300 mmの穴をあけます。

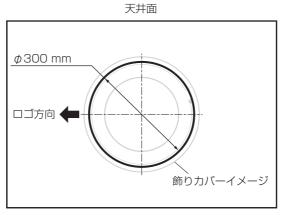


### Step2

### コンクリート天井にアンカーボルト (M10: 現地調達) 2本を打ち 込む

- ① 型紙 (付属品) でアンカーボルト の長さ (取付シャーシ固定用) を 決めます。
- ② 型紙を使って位置決めし、ナット (現地調達)を取り付けます。 (天井板の下面から136 mmの 位置にナットの下面がくるよう にします。)


#### 重要

● 既存のアンカーボルトを落下防止ワイヤーの接続に使用する場合、アンカーボルトとカメラ取り付け位置との距離が1 m以下であることを確認してください。

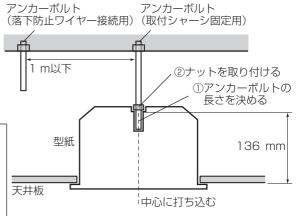


### アンカーボルト (落下防止ワイヤー接続用) に落下防止ワイヤーアングル (付属品) を固定し、落下防止ワイヤー (付属品) を接続する

- ① アンカーボルトに落下防止ワイヤーアングルが固定されるようナットを取り付けます。
- ② 落下防止ワイヤーを落下防止ワイヤー アングルから外します。
- ③ 落下防止ワイヤーアングルの**●**側の 満を、アンカーボルトに入れます。
- ④ 落下防止ワイヤーアングル②側の溝を、アンカーボルトに入れながら、落下防止ワイヤーアングルを閉じます。
- ⑤ 落下防止ワイヤーを落下防止ワイヤー アングルに取り付けます。
- ⑥ ナットを下から通し、上下のナットで落下防止ワイヤーアングルを固定します。
- ⑦ 手順⑥で下から通したナットをダブル ナットで締め付け、固定します。

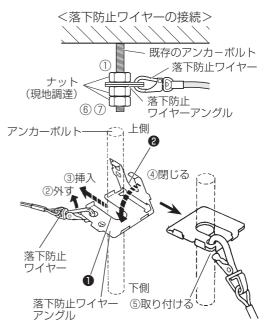


#### メモ

既存のアンカーボルトを使用 して落下防止ワイヤーを接続 する場合、中間挿入式ナット を2個使用すると便利です。

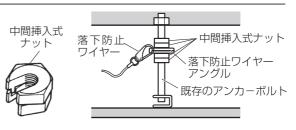

#### 落下防止ワイヤーを取り付ける

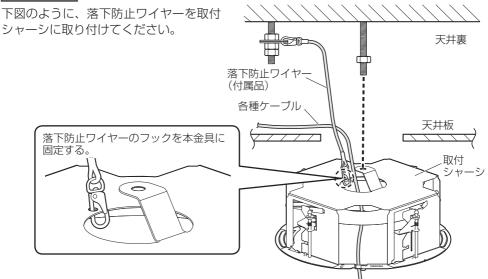


以降のイラストでは、ケーブルや落下防止ワイヤーは省略されている場合があります。


### Step5

### 取付シャーシを天井に挿入する向きを確認する


飾りカバーのi-PROロゴの位置と合わせるために、天井板に挿入する前に取付シャーシの向きを合わせます。

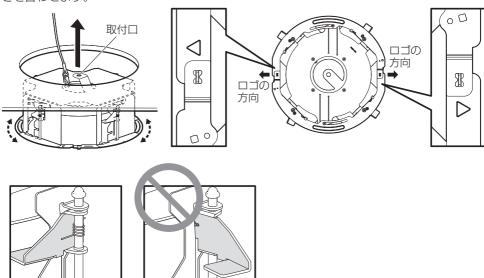

### 取付シャーシを固定する

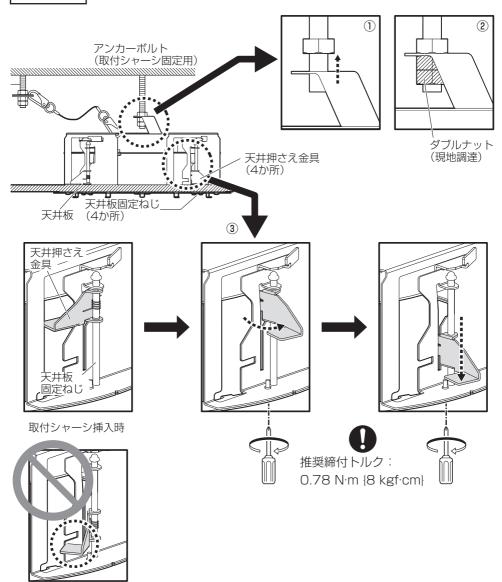



### カメラ取付ステージを引き出す

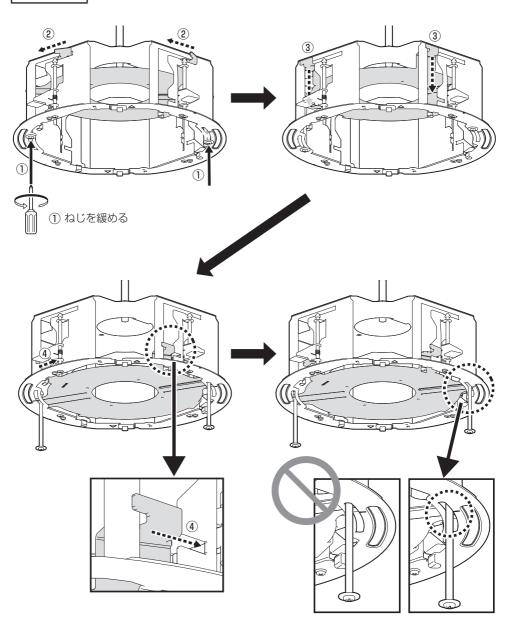


### アタッチメント金具を取り付ける

#### ■カメラの取付方法

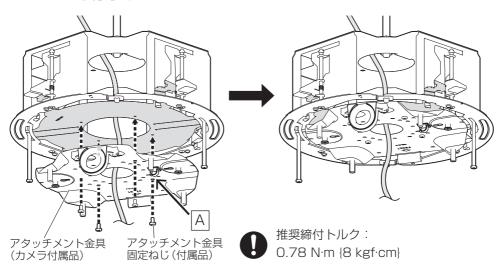

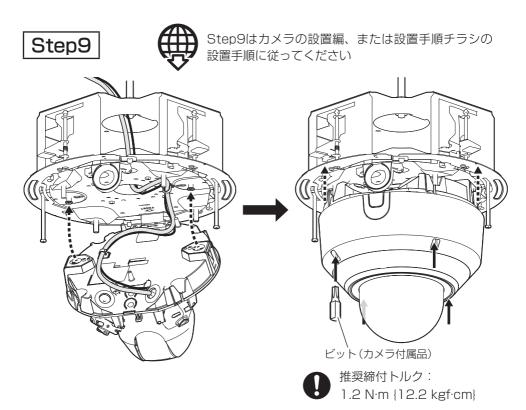

## Step 10 <sup>飾りカバーを取り付ける</sup>

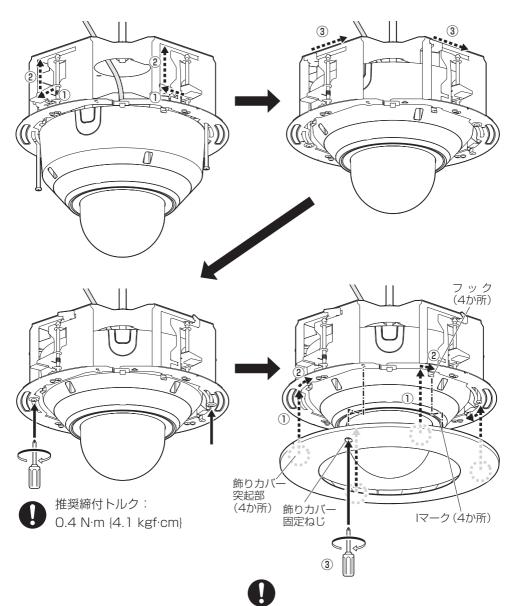

- 推奨締付トルク: 0.78 N·m {8 kgf·cm}
- 飾りカバー固定ねじで固定可能な位置は、 イラストの位置と反対側の2カ所あります。