



Web Guide

Extended Software (AI Scene Change Detection)

Contents


1. Introduction	1
1.1 Product Overview	1
1.2 Features	2
1.3 Installation conditions of camera	3
1.4 Precautions	5
2. Preparation	7
2.1 Install the product	7
3. Basic settings	9
3.1 Set the Detector	11
3.2 Set the detection area	13
3.3 Save images to be learned	16
3.3.1 Manually save camera image	16
3.3.2 Auto save camera image	17
3.3.3 Upload images from PC	18
3.4 Perform learning	19
3.5 Confirm the learning results	20
4. Advanced settings	22
4.1 Detection area setting	22
4.1.1 Detection area setting	22
4.1.2 Set the detection area group	23
4.1.3 Display the demo screen	24
4.2 Learning	24
4.2.1 Image selection screen for learning	25
4.2.2 Learning area settings	28
4.3 Advanced settings	29
4.3.1 Advanced detection settings	30
4.3.2 HTTP notification destination	34

4.3.3	MQTT transmission	36
4.3.4	Maintenance screen	37
5.	Demo screen	39
6.	Schedule setting	41
7.	Other	43
7.1	Specifications	43
7.1.1	PC environment required	43
7.1.2	Supported cameras	43
7.1.3	Combination with other AI applications	43
7.1.4	About the SD Memory Card	43
7.1.5	Learning	44
7.1.6	Operation	44
7.2	Trademarks and Registered Commercial Code	45
7.3	Open Source Software	45
7.4	Copyright	55
7.5	Disclaimer	55
7.6	Troubleshooting	56

1. Introduction

This manual explains how to register the extension software "AI Scene Change Detection" (hereinafter referred to as "this product") with the camera, the settings required before starting operation, and how to operate the camera during operation. The camera must be registered before use. Be sure to read the camera's instruction manual when using the camera. The settings shown in this manual may differ depending on the camera model used and the i-PRO Configuration Tool version (hereinafter referred to as "iCT").

1.1 Product Overview

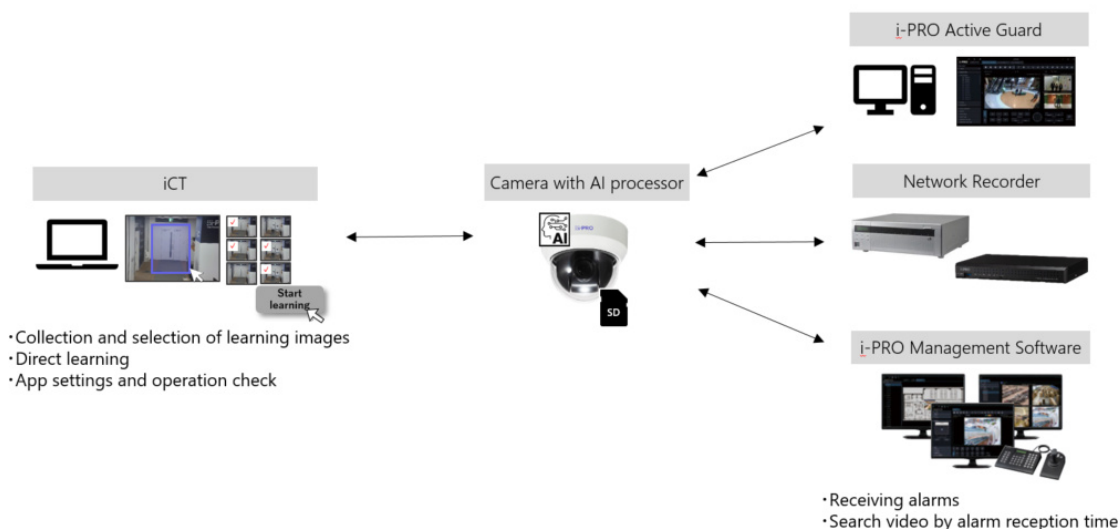

This product is software for more convenient use of AI network cameras (sold separately, hereinafter referred to as cameras). The cameras can learn the normal condition and use the alarm notification function when the condition changes.

Alarms can be notify the following external systems:

- i-PRO Management Software (optional)
- Network Recorder (optional)
- i-PRO Active Guard

Use iCT for the setting of this product.



•For information about iCT, see the following URL. Please use iCT after V3.5 for the setting of this product.

→[Click here for more information about iCT](#)

•Refer to the following URL for information on the supported models and software versions of this product.

→[Technical information website](#)

<C0103>

*"<Control number: Cxxxx>" is the number used to search for the information in our support website below.



•This product is required for each camera.

•An SD Memory Card is essential for use with this product. The use of an SD Memory Card for i-PRO devices is recommended.

•If the SD Memory Card is formatted while this product is in use, restart the camera.

1.2 Features

- This product defines/learns the normal condition and notifies the specified notification destination of the alarm when it is determined to be abnormal. It is useful in several cases, including the following:
 - To prevent a door for storing important items from being closed or opened.
 - To quickly grasp the shortage condition on shelves and replenish them.
 - To search for exhibits and other items when they are taken away from the place where they should be.
 - To warn about leaving immediately if a car is parked in a parking prohibited area.
- This product has the following features.
 - Learn up to three normal conditions and create a Detector.
 - Set and learn up to 16 detection areas.
 - Adjust alarm notification conditions according to the operating environment. See below for details.
 - [4.3 Advanced settings](#)
 - Backup/upload data stored on an SD Memory Card.


Please refer to the following for the operation visual of this product. In the operation visual, the state in which the door is closed is learned as the normal condition. Light blue indicates normal condition, blue indicates abnormal condition, and red indicates abnormal and alarm condition.

https://www.youtube.com/embed/Xquymh_pHpU

1.3 Installation conditions of camera

This product is recommended for indoor use. The following is an example of the assumed use environment. (Outdoors, there are large fluctuation factors such as weather, sunshine fluctuations, and seasons, and detection performance may decline.)

The minimum detection size of the product is 5% or more. Adjust the angle of view so that the target is larger than one (1) grid square displayed on the live image.

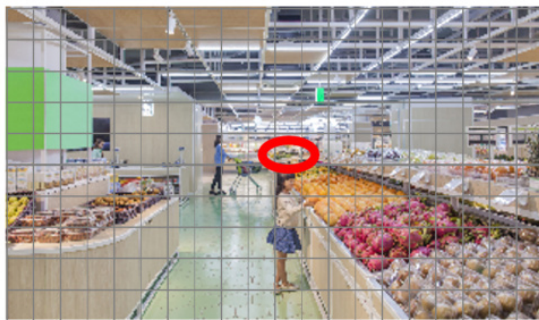

When determining the angle of view using the System Design Tool, set the guidance parameters from [AI Application]-[General Purpose]-[Select your camera] as follows.

[Target Height] = Height of sensing object from floor + Height of sensing object

[Target Size] = Short side of the object to be detected

[Target Pixels] = Set the lower detection limit to the value below.

8MP(4K)	6MP	5MP	4MP	2MP(1080p)
200pix	170pix	160pix	140pix	100pix

1. Introduction
1.3 Installation conditions of camera

Guidance Conditions

Select: AI Scene change detection

Target Height :	1.80	ft.
Target Size :	0.66	ft.

Target Pixels:	<input checked="" type="checkbox"/> Detectable	Lower Limit	100	pix(151 PPF)	Upper Limit	<input type="checkbox"/> 3500	pix(5303 PPF)
	<input type="checkbox"/> Recommended	1	pix(1 PPF)		<input type="checkbox"/> 3500	pix(5303 PPF)	

Tilt Angle Range :	<input type="checkbox"/> Detectable	0	°	~	90	°
	<input type="checkbox"/> Recommended	0	°		90	°

Oscillation Angle Range :	<input type="checkbox"/> Detectable	± 90	°
	<input type="checkbox"/> Recommended	± 90	°



360-degree fisheye cameras cannot be configured in the System Design Tool.

[Ex. (2MP(1080p) Camera)]


To detect missing shelves as shown in the figure below, set as follows.

※In this case, set the detection target at the lowest stage of the image to be reflected smaller.

[Target Height] = 0.82 + 0.98 = 1.80ft.

[Target Size] = 0.66ft.

[Target Pixels] = 100pix the lower detection limit

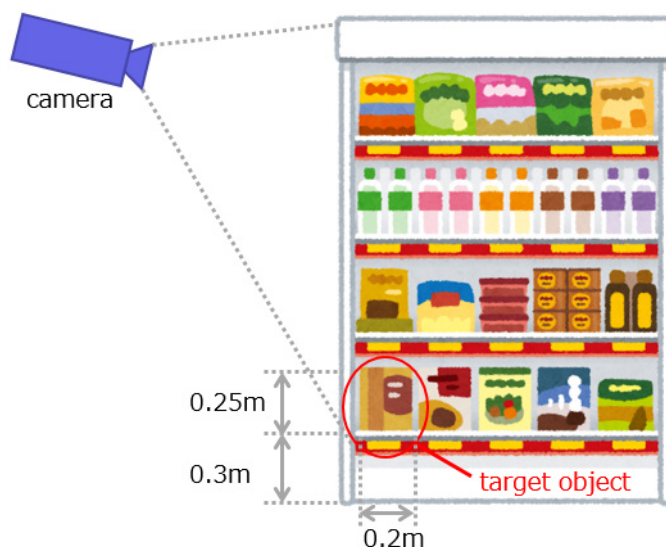



Above is the case where the learning area is the default setting (entire screen). You may be able to detect distant objects by limiting the learning area.

Please refer to the following for the operation visual of this product.

1.4 Precautions

The following cases may cause a missed alarm or false alarm.

- The difference in brightness between the background and the subject is small.
- Image brightness is low, such as at night.
- The subject is out of focus.
- The subject is blurred.
- The subject is too small or too large.
- The subject is white or blackened.
- Light conditions, such as outdoors and windows, are easily changed.
- External light such as sunlight and car headlights, and reflection of light such as water pools and glass come in.
- Strong external light is inserted to create a subject and other shadows.
- The camera lens is wet or dirty.
- The camera is shaking.

Other precautions are described below.

- If you change the camera image settings before or after learning, it may cause a failure or false alarm. When you change the [Image capture mode] or [Image rotation] settings of the camera, perform the following again.
 - [3.3 Save images to be learned](#)
 - [3.4 Perform learning](#)
- When using in an environment where color images and black-and-white images are switched, it is recommended that you train color images and black-and-white images individually.
- Images of illumination assumed during operation must be collected and learned.
- When using under IR-LED, you need to train with images under IR-LED.
- If you are using the camera in an environment where human, vehicles, or bicycles can be seen, select the objects that are in [Exclude from scene change] setting. However, if human,

vehicles, or bicycles are not detected correctly, it may not be excluded correctly. Also, if objects that are not human, vehicles, or bicycles are detected as human, vehicles, or bicycles, objects that are not human, vehicles, or bicycles may be excluded.

- Enable [Abandonment detection] when using the product for detecting obsolete objects (suspicious objects, etc.).
- If a false alarm is generated at low illumination, activating the setting to stop the alarm at low illumination prevents false alarms.
- This product cannot be set or trained from multiple PCs at the same time.
- If you execute [Reset to the default] of the camera, the setting data of this product and the data in the SD memory card (Learning images, Detector) will not be initialized. However, since it may be affected by the image quality settings of the camera itself, please check the operation again.
- The message ID of TCP alarm notification is "59" for AI scene change detection alarm and "60" for the alarm when the SD memory card cannot be accessed.

2. Preparation

The flow up to operation is as follows. This chapter describes ① and ②.(If you cannot select [AI Scene change detection] from [Extension software] on the setting screen, please do so in your browser.)

- ① Install the product
 - [2.1 Install the product](#)
- ② Configure the required settings.
 - [3. Basic settings](#)
 - [4. Advanced settings](#)
 - [6. Schedule setting](#)
- ③ Start of operation

2.1 Install the product

Download the product and install it on your camera according to the following procedure.

1. Access the download site and download [AI Scene change detection]



Refer to the following for the download site of this product.


→[Click here for downloads](#)



Do not use spaces or double-byte characters in the name of the destination directory.

2. Preparation

2.1 Install the product

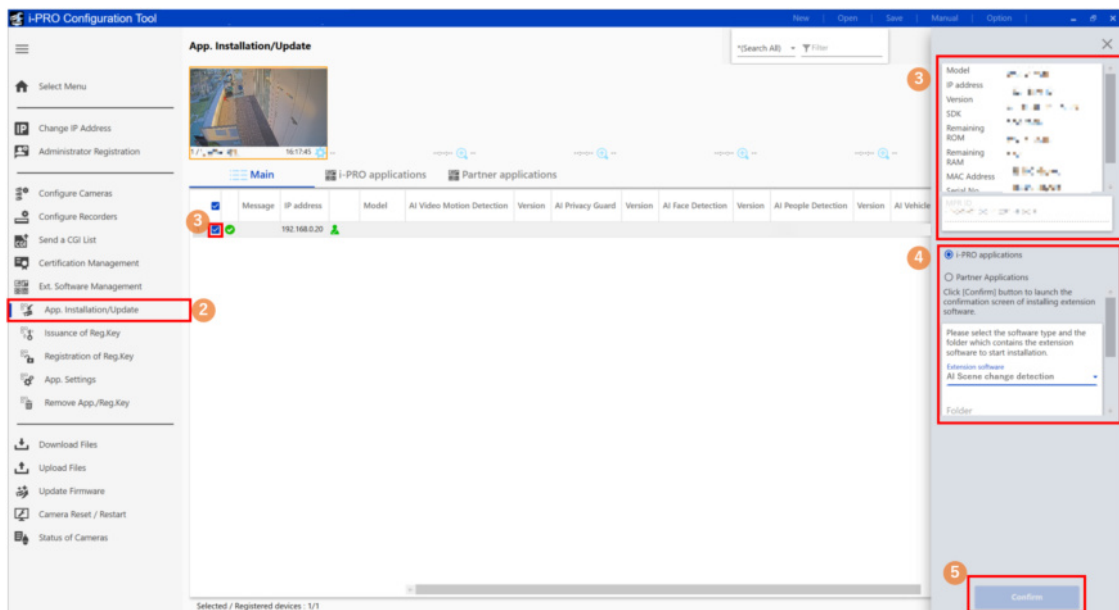


2. Click the iCT submenu [App. Installation Management]
3. Select the camera on which the application is installed and confirm that the product number and other information and device ID number are displayed.
4. Enter the following items on the setting screen.
 - Extension software: Select [AI Scene change detection]
 - [Saved Folder] : Specify the location of the extension software obtained in (1).
5. Click [Confirm]
A confirmation screen is displayed.
6. Check the following on the confirmation screen.
 - The target camera is selected.
 - Version of the application to register/update
7. Click [Start]
The progress screen is displayed.
8. Confirm the installation is completed successfully



- Do not turn off the camera during installation.
- Do not perform any operation during installation until the installation is completed.
- If the installation fails, check the errors in the message field.
- If the setting screen cannot be opened normally immediately after installation, please restart the camera.

3. Basic settings

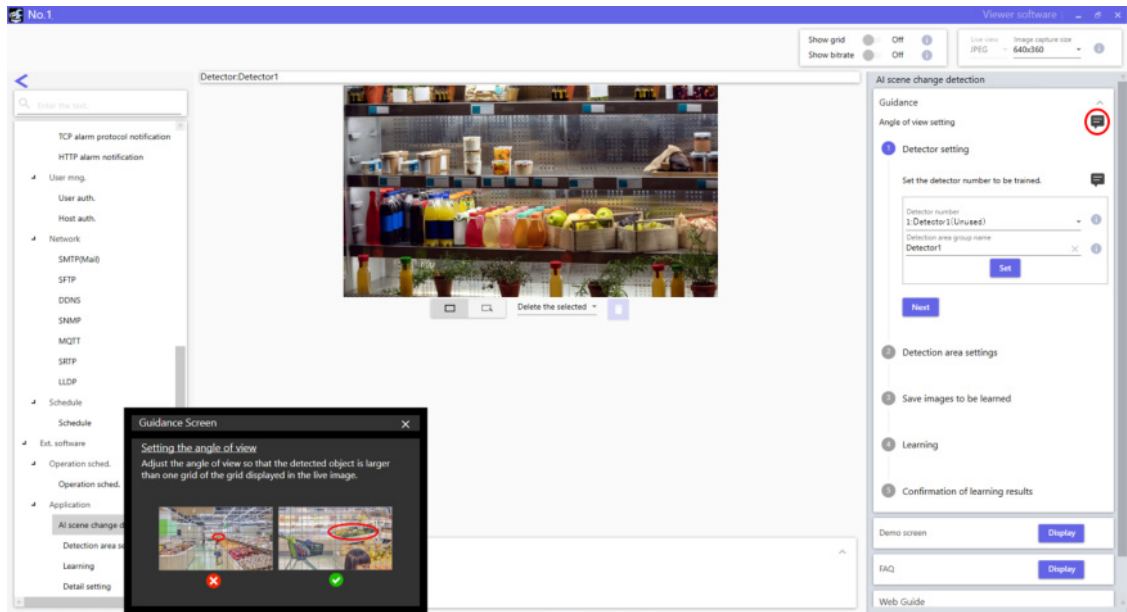

Indicates the basic operations for setting the AI Scene Change Detection function.

Each item has a bubble mark. Click to display the procedure in the lower left corner of the screen.



Refer to the following for precautions on setting the angle of view.

→ [1.3 Installation conditions of camera](#)

The [AI Scene change detection] function is implemented with the following elements.

The following explains the terms used in the following explanations.

Learning images


Still images used for learning. Images taken directly from the camera are mainly used. They are saved on the SD Memory Card.

Detector

This is the result of learning scene change detection created by AI from multiple learning images. It is saved on the SD Memory Card.


Detection area


The area to be covered by scene change detection. Specified by a blue frame on the live image.

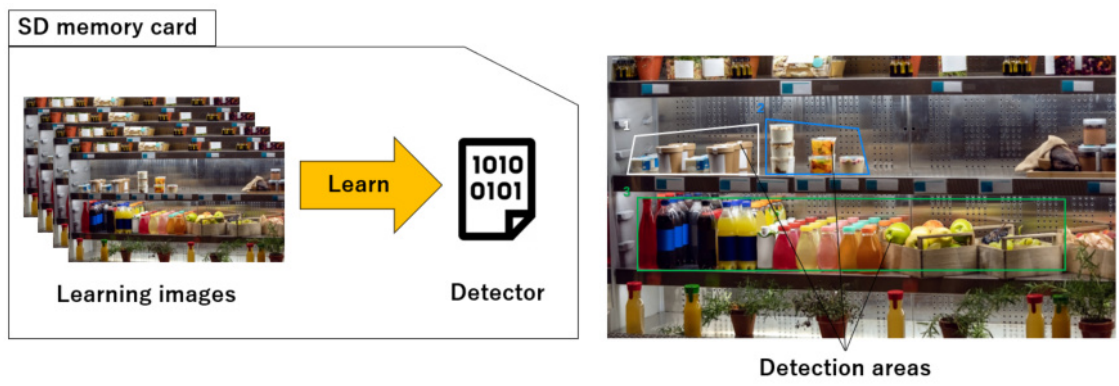



3.1 Set the Detector

1 Detector setting

Set the detector number to be trained. 

Detector number
1:Detector1(Unused) 

Detection area group name
Detector1  

Set

[Back](#) **Next**


Configure the Detector.

There are three areas in which Detector can be recorded: when you want to switch models in black-and-white video, or when you want to try it in several patterns.

For example, by having Detector 1 study a color image and Detector 2 study a black-and-white image, scene change detection can be performed using Detector 1 for a color image and Detector 2 for a black-and-white image. However, when Detector is switched in black-and-white video, specify detector number in the advanced [Detector used in black and white video].

→[4.3.1 Advanced detection settings](#)

3. Basic settings
3.1 Set the Detector

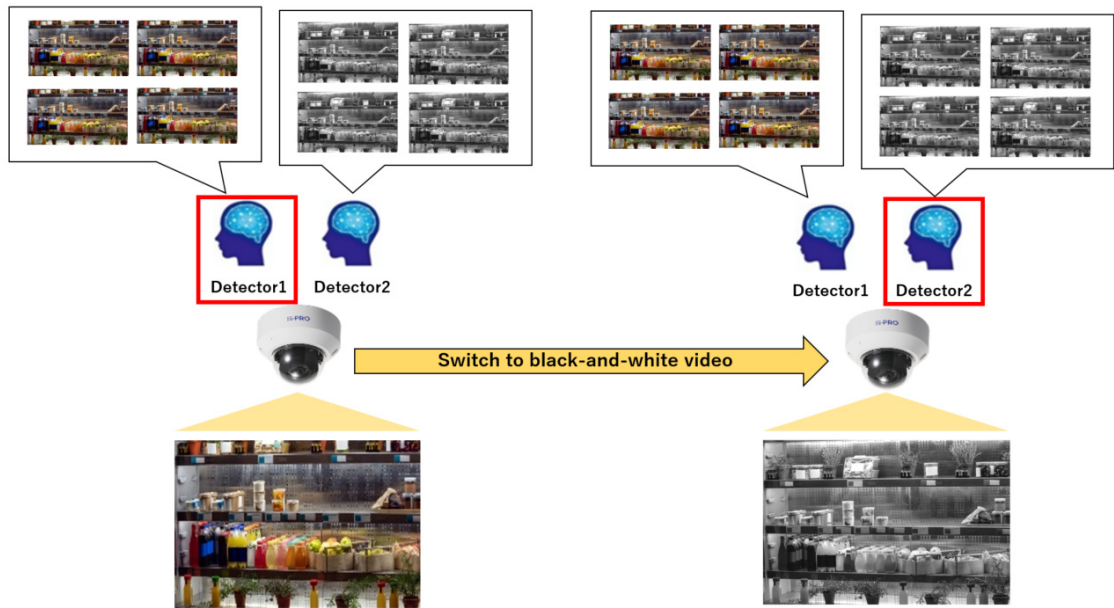



- Select [Detector number].
 - Select from 1 to 3.
 - [(Used)] is displayed for the number where a Detector is already used.
 - A number that is not in use will be marked [(Unused)].
- Set [Detector Name].
 - Set the name of the detector selected in [Detector number]. Up to 20 half-width or full-width characters can be set.
- Press [Set].




Note that if you select a [(Used)] model number, the Detector will be overwritten at the completion of learning.

3.2 Set the detection area


2 Detection area settings

Set the detection area. 
The detection area can be changed even after 

Detection area

Detection area number 

Registration Information

Detection area name 








Detection time 10s 

Image change threshold 50  

Area change threshold 50  

State inversion Off 

Abandonment detection Off 

Set

Back **Next**

Set the detection area.

1. Draw the detection area in the live image on the iCT individual setting screen.
 - The detection areas can be configured as a polygon of any shape, up to 16 vertices.
 - The color changes for each detection area to facilitate identification when the detection area is crowded.

3. Basic settings

3.2 Set the detection area

Colors are automatically assigned and set in different colors until area 8. Areas 9 to 16 will be the same color as areas 1 to 8.



2. Select the detection area number to be set.
 - Select 1:(Detection area name) ~ 16:(Detection area name) from [All].
 - Select [All] to set each detection area individually, or to set all detection areas collectively.



When [All] is selected, the checkbox will be added next to the parameters as shown.

Selecting a check mark on the item to be set collectively will apply the selected value.

[Detection area group name] cannot be set when [All] is selected.

3. Set the [Detection area group name]
 - You can set up to 20 characters of both half-width and full-width characters.
4. Select [Detection time]
 - Select the time from when an error is detected to when an alarm is sent.
 - Select [2s], [3s], [5s], [10s], [20s], [30s], [40s], [50s], [1min], [5min], [10min], [15min],[30min], [1h], [2h], [3h], [6h], [12h], [18h] or [24h].



•[Image change threshold] and [Area change threshold] are adjusted when checking the accuracy.

See below for details.

→[3.5 Confirm the learning results](#)

•If [Detection time] is shorter than [Dwell time] of [Day & Night(IR)] of camera setting, AI scene change detection alarm may be activated at the time when an

3. Basic settings

3.2 Set the detection area

image is switched to black-and-white. It can be improved by setting [Dwell time] of [Day & Night(IR)] shorter than [Detectiontime].

5. Select [State inversion]
 - When [On] is selected, the alarm will be activated in the same way as when learning. When [Off] is selected, the alarm will be activated in a way that is different from the one learned.
6. Select [Abandonment detection]
 - Select [On] for detecting obsolete objects (suspicious objects, etc.).



- When [Abandonment detection] is set to [On], objects of a certain size are detected regardless of the [Area change threshold] setting. (Reference: Approx. 5 to 50% width of screen)
- If you set [Abandonment detection] to [On] for more than one [Detection area], then [Image change threshold] and [Detection time] are the lowest numbered values for [Detection area].
- Even when [Exclude a person from scene change] is set to [On], shadows may be detected as abandoned objects. In that case, increasing the [Image change threshold] may suppress false detection.
- In the abandoned position detection, set the detection area larger so that the center of the bottom surface of the object is within the detection area.

Image of setting the detection area




7. Press [Set].



Note that the setting is cleared by switching the detection area number before pressing the set button or by pressing the [Back] or [Next] button.

3.3 Save images to be learned

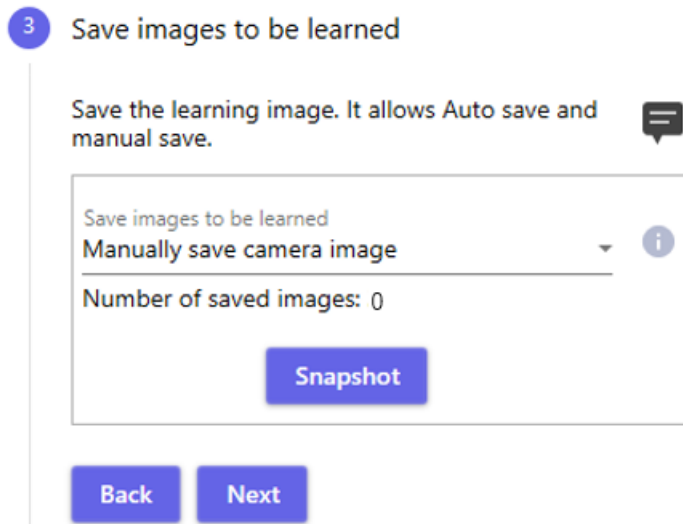

Images are taken for learning.

You can take pictures directly from installed cameras and select from [Auto save camera image] and [Manually save camera image].

In [Auto save camera image], when [Save interval] and [Number of save images] are specified, one still image for [Number of save images] is automatically saved for each [Save interval].

In [Manually save camera image], you can manually save still images when necessary.

Select [Upload images from PC] to save jpg/png files on your computer as learning images.




If the image is not saved properly when pressing [Snapshot], restart the camera.

3.3.1 Manually save camera image


1. Select [Save images to be learned]
 - Select [Manually save camera image].
2. Press [Snapshot]
 - One shot image (still image) is capture.

3.3.2 Auto save camera image

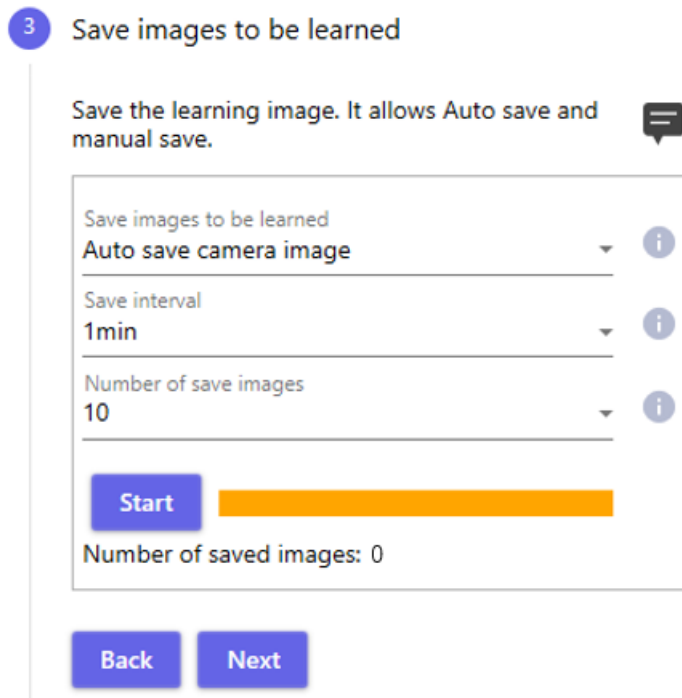


1. Select [Save images to be learned]
 - Select [Auto save camera image].
2. Set the [Save interval]
 - Select from [1min], [5min], [10min], [15min], [30min], or [60min].
3. Select [Number of save images]
 - Select from [10], [20],..., [90], [100], [150], or [200].
4. Press the [Start]
 - To stop auto save, press [Stop].
 - During auto save, progress is displayed beside the Stop button.

3.3.3 Upload images from PC

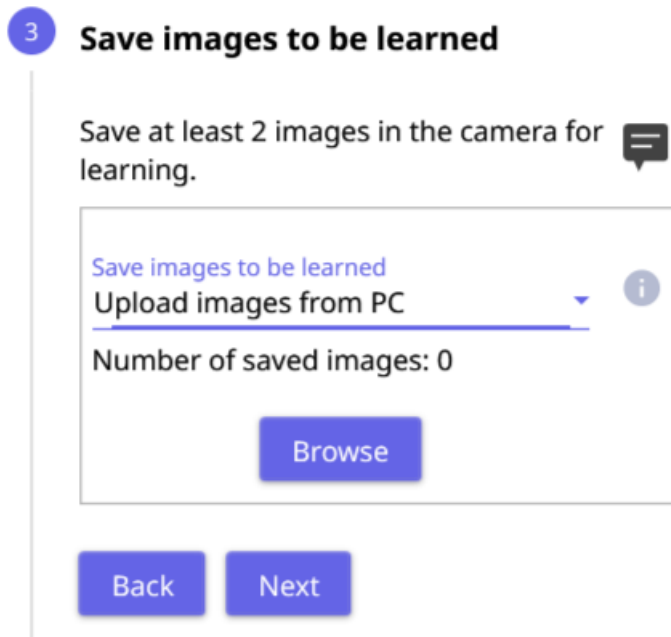

1. Select [Saving the learning image].
 - Select [Upload images from PC].
2. Click [Browse].
 - The Add File screen is displayed.

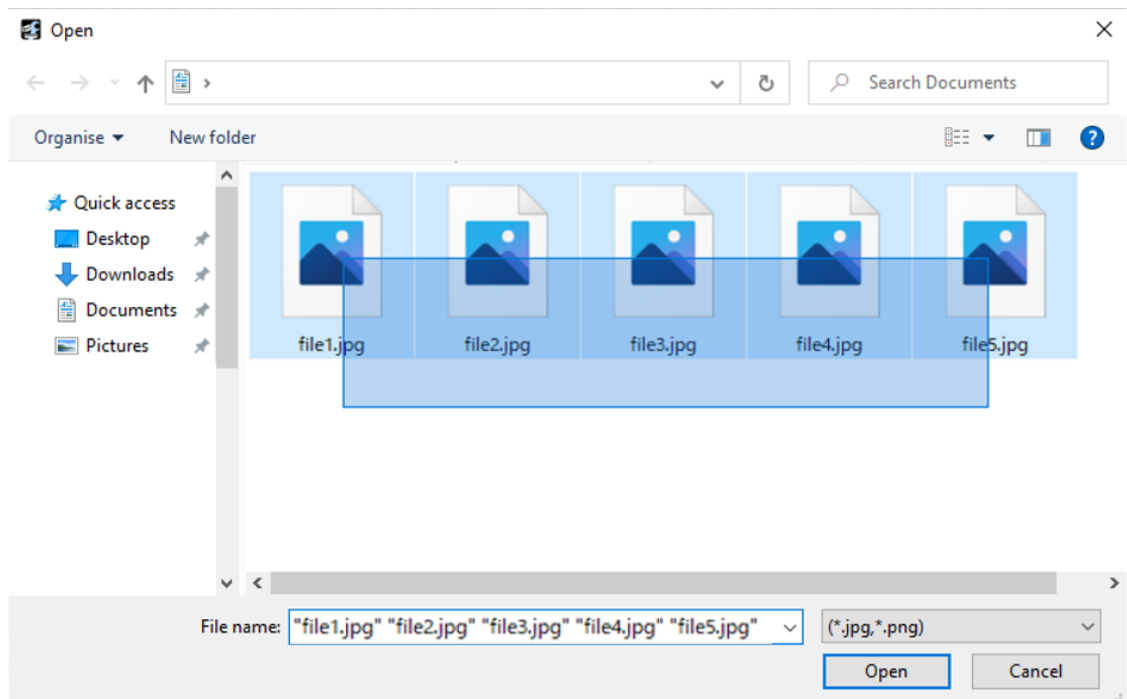


3. Select the files you want to save as learning images, and then click [Open].

- Saving starts.
- The progress is displayed while the file is being saved.



- The learning image formats are compatible with.jpg and.png.
- The resolution of the image that can be saved as a learning image is between 640pixels and 3840pixels.
- The only aspect ratio of an image that can be used as learning image is the same aspect ratio as the camera's image capture mode.
- Up to 1000 learning images can be saved. However, depending on the resolution of the learning image, you may not be able to save up to 1,000 images.

3.4 Perform learning

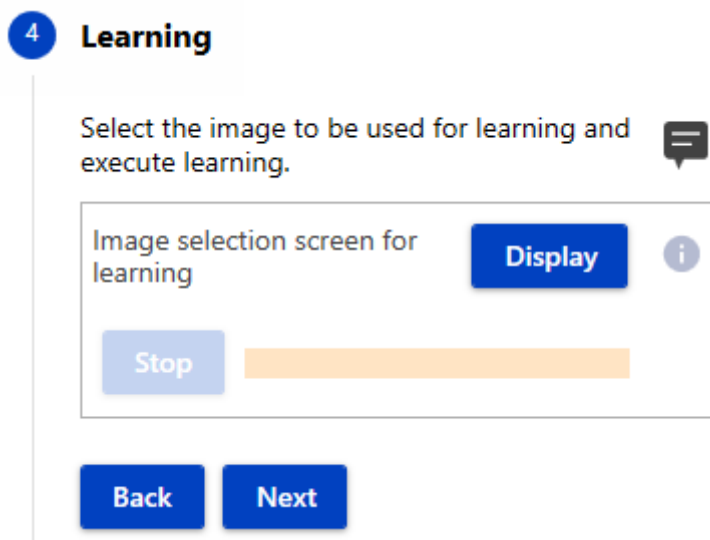


Perform learning.

Press the Display button to open the Learning images selection window.

Select the image to be used for learning from the thumbnail list of captured images.

3. Basic settings

3.5 Confirm the learning results

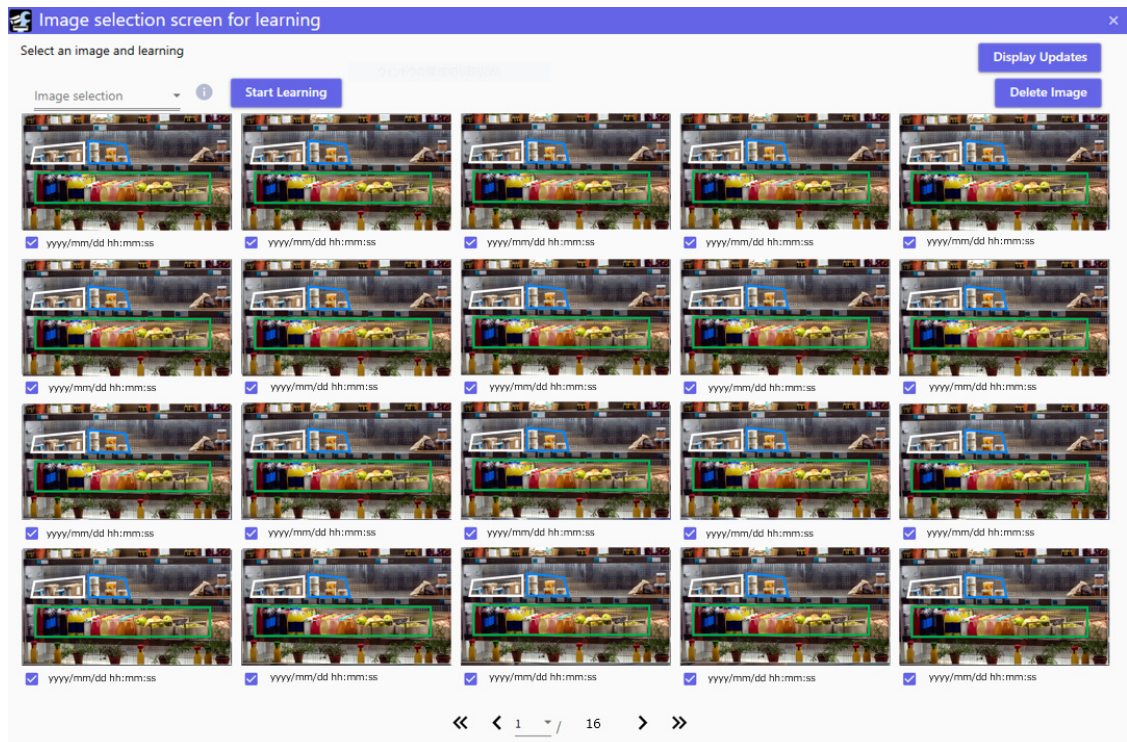

1. Select the images (Training images) to be used for learning.
 - Select the checkbox in the lower left corner of thumbnail of the target image as shown in the figure.
 - Learning requires at least two images. Up to 200 images can also be learned.
2. Press [Start Learning]

3.5 Confirm the learning results

5 Confirmation of learning results

Check the learning results.

Demo screen Display

Back Finished

Check the learning accuracy.

3. Basic settings

3.5 Confirm the learning results

Press [Display] to start the demo screen.

Refer to the following for details about the demo screen.

→5. [Demo screen](#)

Press [Back] three times to return to [Detection area settings].

[Image change threshold] and [Area change threshold] are adjusted so that various possible situations are reproduced and alarms are not generated when the alarm does not want to be detected.

1. Adjust the [Image change threshold]

- Set scene change thresholds.

The smaller the value, the easier it is to detect the change. The larger the value, the more difficult it is to detect the change.

The area where the change is detected is displayed in red on the demo screen.

2. Adjust the [Area change threshold]

- Set the area of the scene change.

The alarm is activated when the set detection time has elapsed while the scene change Area change ratio in the detection area exceeds this threshold.

The Area change ratio is displayed on the demo screen.

4. Advanced settings

4.1 Detection area setting

4.1.1 Detection area setting

Detection area setting

Detection area number

Registration Information

Detection area name

Detection time
10s

Image change threshold
50

Area change threshold
50

State inversion
Off

Abandonment detection
Off

Detection area group settings **Display**

Demo screen **Display**


Set

Set the detection area.

For details on how to set the detection area, refer to the following.

→[3.2 Set the detection area](#)

4.1.2 Set the detection area group

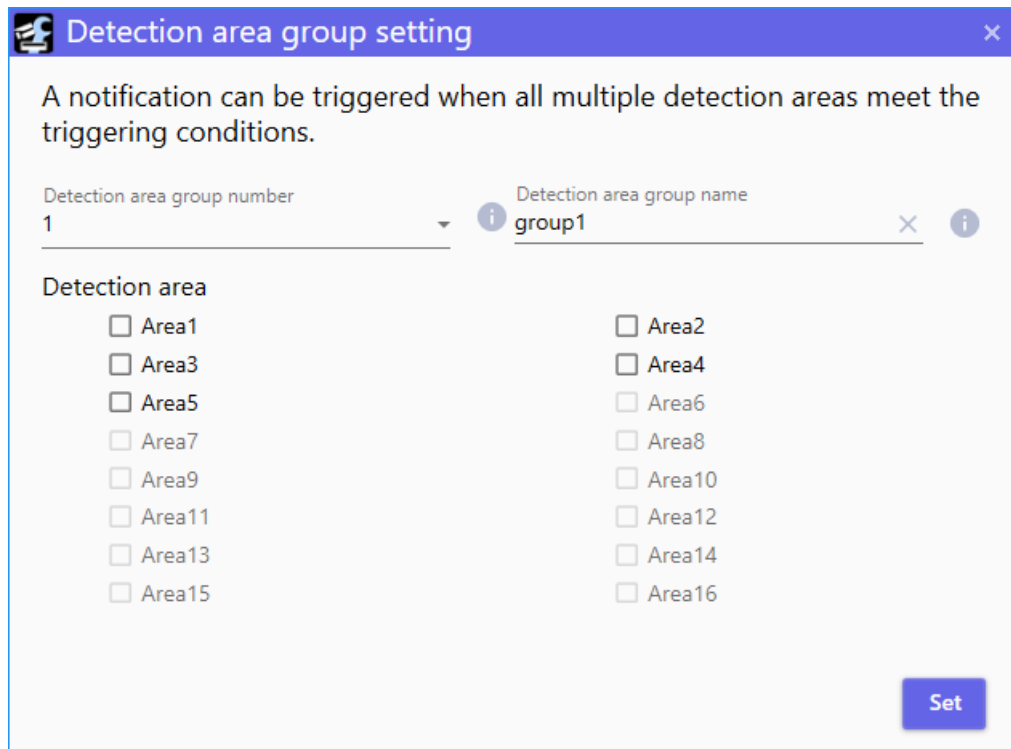

Set the detection area group.

Normally, when one of the detection areas meets the detection conditions, the alarm is activated.

By setting a group, the alarm is activated when all the detection areas in the group meet the detection conditions.

Set the detection area group as follows.

- Select [Detection area group number]. You can select a group number from 1 to 4.
- Set the [Detection area group name] of the detection area group.
- Select the detection area to include in the group.
- Click [Set] to apply the setting.

4.1.3 Display the demo screen


Check the learning accuracy.

Press [Display] to start the demo screen.

Refer to the following for details about the demo screen.

→5. [Demo screen](#)

4.2 Learning

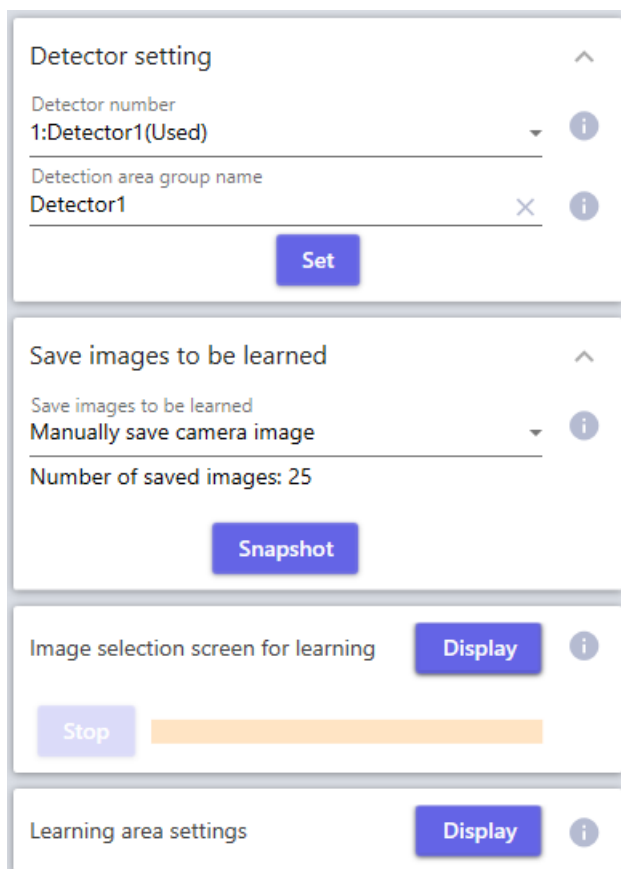

This chapter describes the setup for learning. Refer to the table below for details of the problem and refer to the appropriate chapter.


For information about how to configure [Detector setting] and [Saving learning images], see the following.

→3. [Basic settings](#)

Description	Reference
I want to know the functions of the image list display screen.	→4.2.1 Image selection screen for learning
I want to change the area to learn for each image. I want to detect small objects.	→4.2.2 Learning area settings

4.2.1 Image selection screen for learning

This displays the list of images saved for learning and performs learning. Clicking [Display] displays a list of saved images.

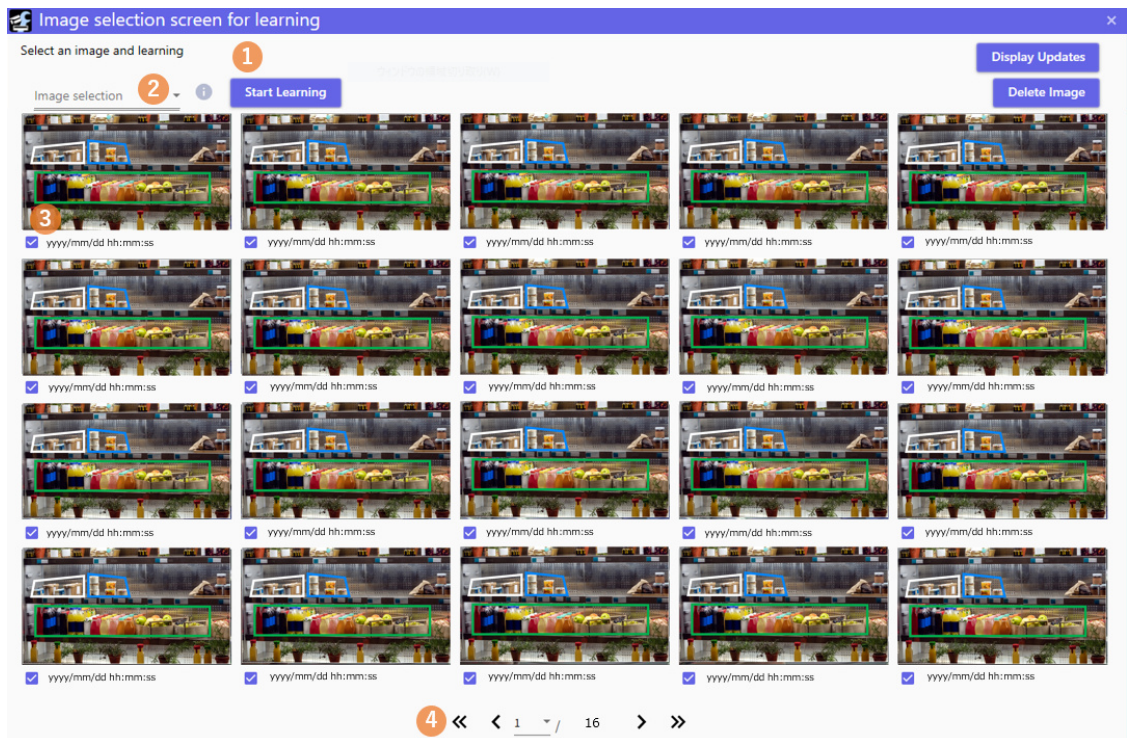

- Select the image you want to learn and click [Start Learning] in the upper left corner to start learning.
 - If you want to delete an image from the list, select the image you want to delete and click [Delete Image] to delete it.
 - An image that has already been learned displays a green check mark at the bottom left of the image.
1. Click [Start Learning] in the upper left corner to start learning and display the progress of learning in real time.
 2. When selecting a large number of images, you can select and cancel all images by specifying

4. Advanced settings
4.2 Learning


the image selection method from the pull-down on the upper right.

Select from [Select All], [Unselect All], [Select Learned Only], [Select unlearned only], [In-page selection], or [In-page cancellation].

3. Click the thumbnail image to enlarge the thumbnail image.


Click [Back] in the upper left corner to display the previous image, and [Next] to display the next image.

Click [Delete Image] in the upper right corner to delete the displayed image.

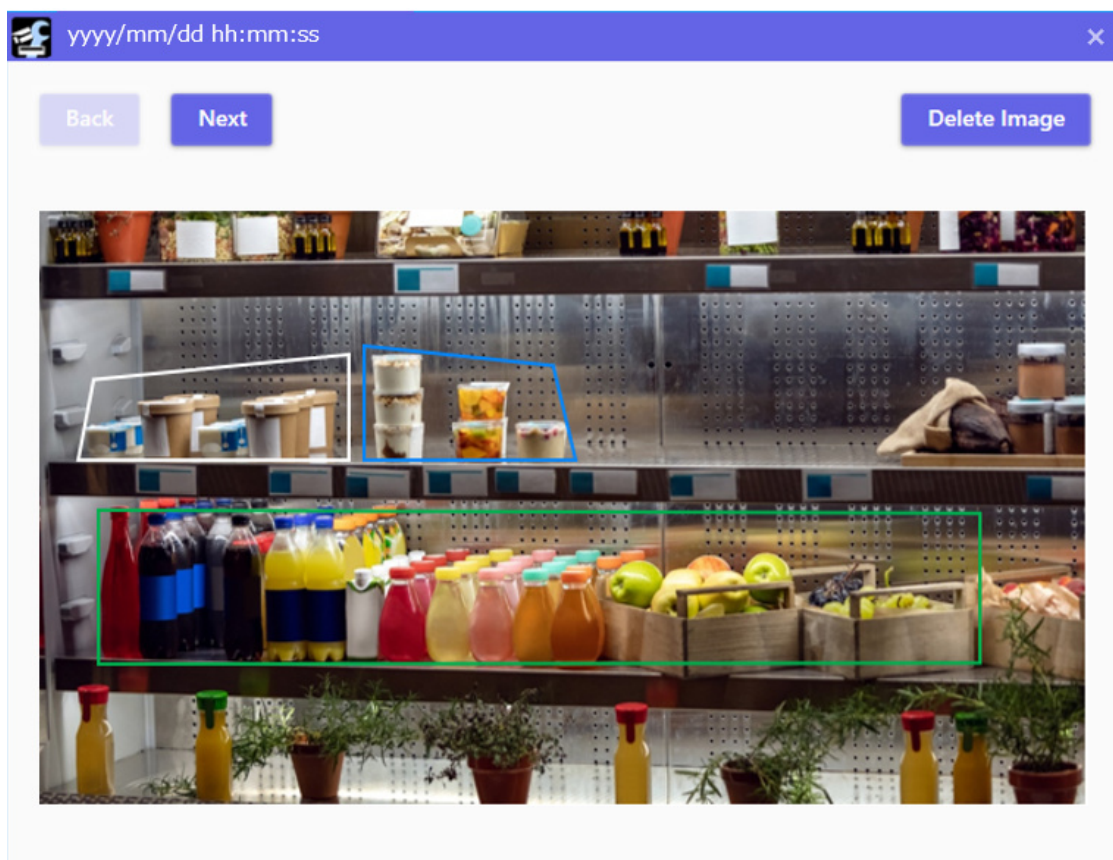


When multiple learning areas are set up, they can be enabled or disabled by clicking in the learning area as shown in the figure below. The disabled state is represented by a dotted line with a white border.

If you do not want to use the area for learning, disable it.

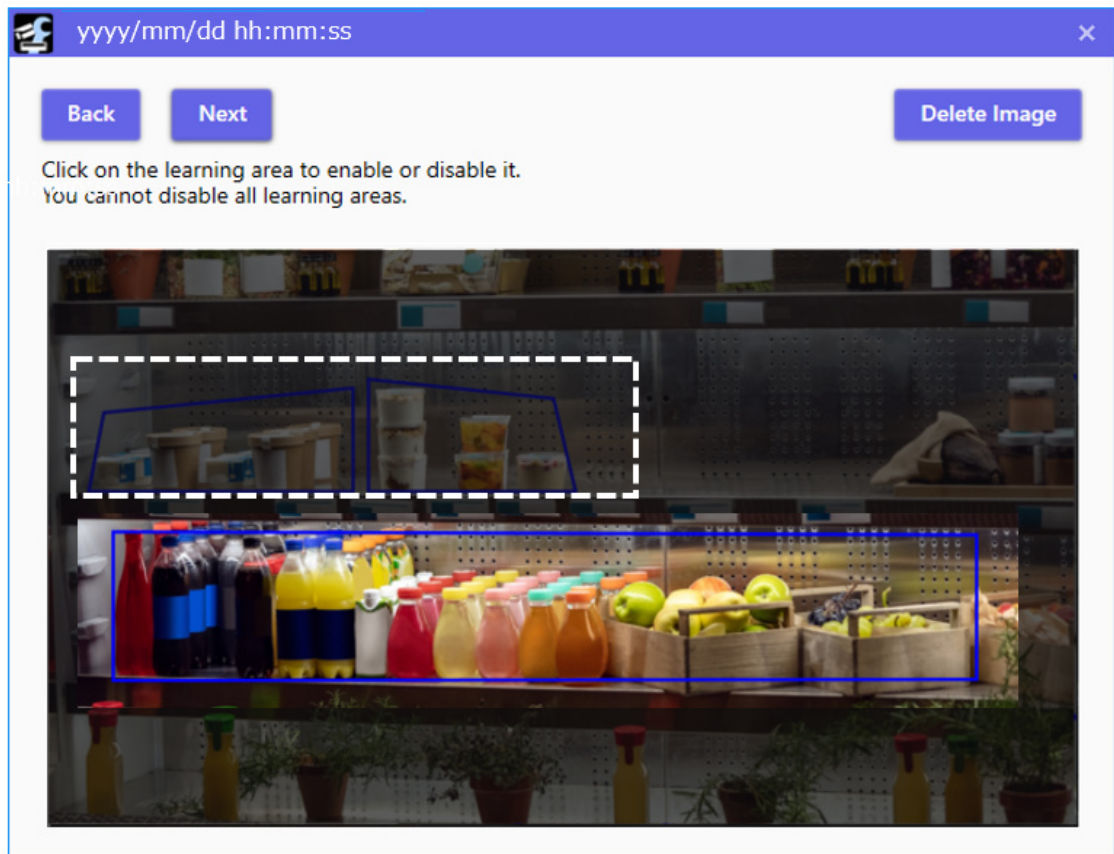

4. Click the buttons at the bottom to switch pages.
The following operations and displays are explained from left to right.
- Start page display button: Click to display the first page.
 - Previous Page View button: Click to display the previous page.
 - Page Selection: The selected page is displayed.
 - Last page: The number of the last page is displayed.
 - Next Page View button: Click to display the next page.
 - Last page view button: Click to display the last page.

4.2.2 Learning area settings

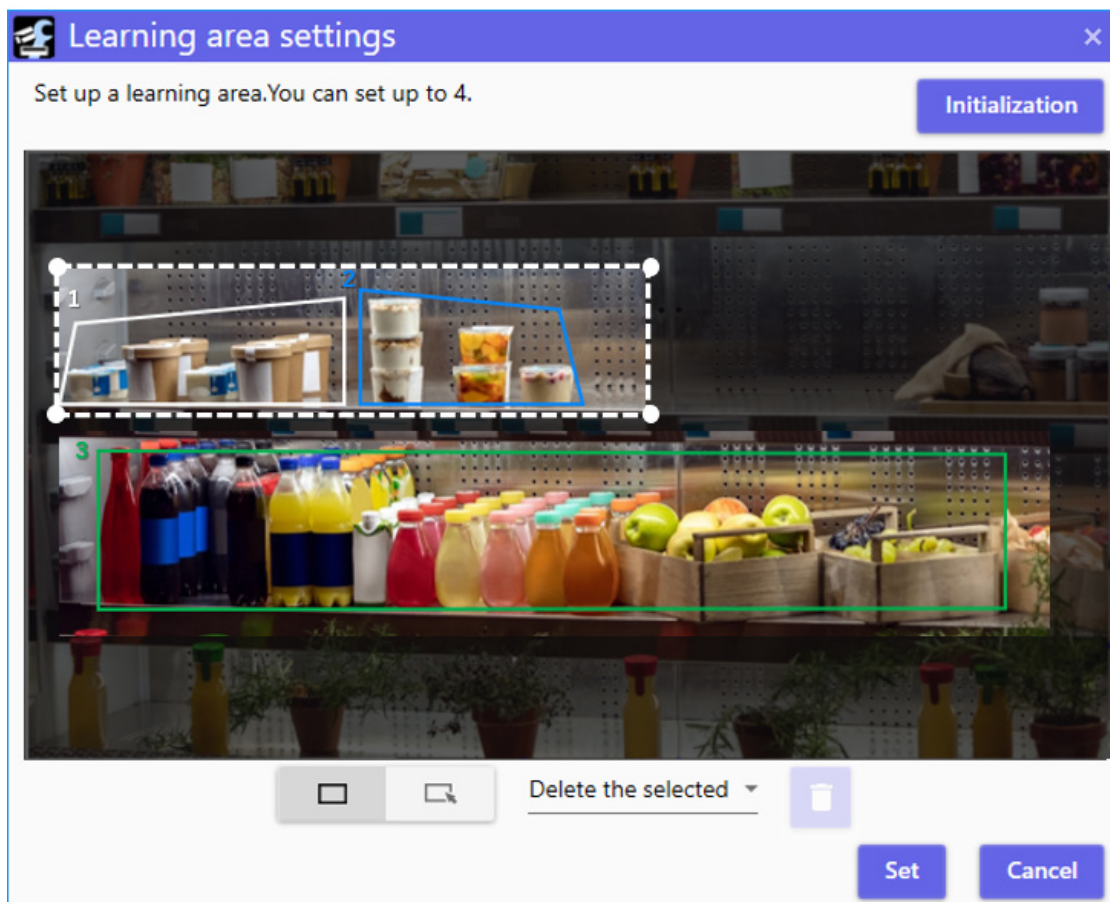


Set the learning area. Since the set range is used for learning, this is set to change the area to learn for each image or to detect a smaller object.

Set the learning area as follows.

- Set the learning area on the live screen. By selecting the start and end points, the learning area is set as a rectangle.
By default, all areas are configured and up to four areas can be specified.
- When set, the unlearned areas appear darker.
- To delete, select the area you want to delete and click the trash button.
The selected area is displayed with a dotted line.
- When the magnified thumbnail image is displayed by clicking it on the [Image selection screen for learning], the learning area can be enabled/disabled for each image.
See below for [Image selection screen for learning].
→[4.2.1 Image selection screen for learning](#)

4. Advanced settings
4.3 Advanced settings

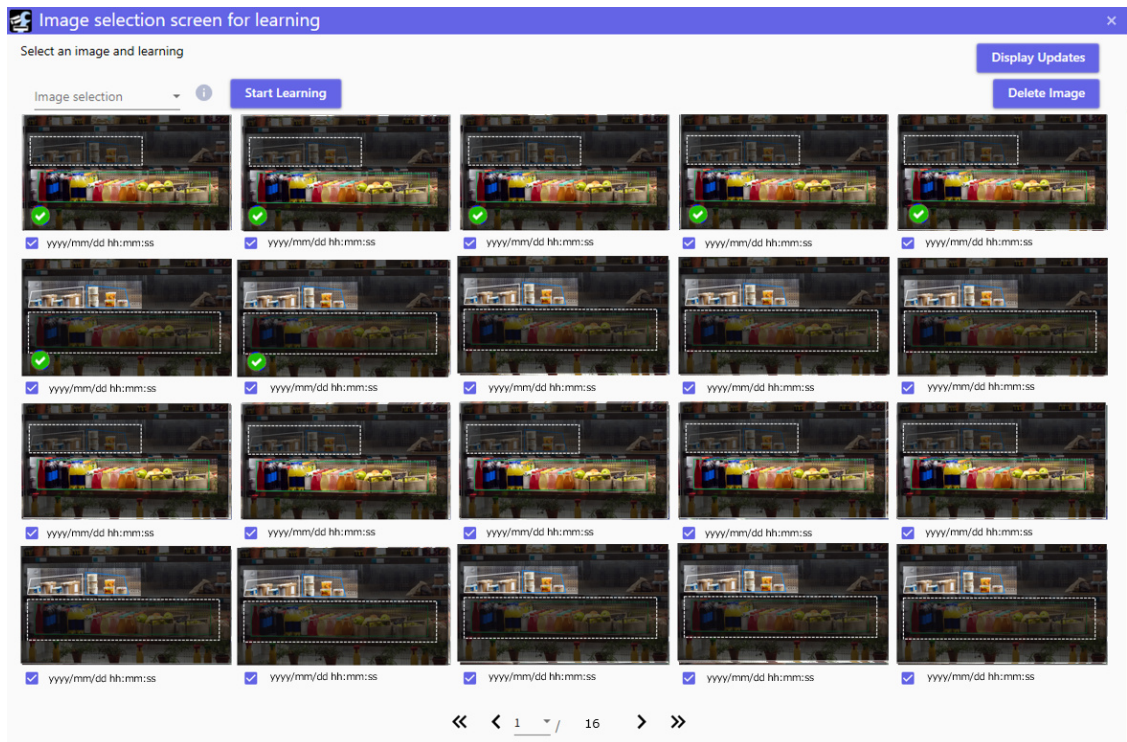

The status of the learning area in each image can also be checked on the image list screen.



If the learning area is reset, check whether the learning area is enabled or disabled before re-learning.

Switching the Detector resets the learning area.

For models with [RAM capacity expansion mode] of [Ext. software] on the camera, [RAM capacity expansion mode] must be turned on prior to setting the learning area.


4.3 Advanced settings

This chapter describes the settings to be adjusted in case of trouble in the following cases. Please refer to the table below for details of the problem and refer to the appropriate chapter.

Description	Reference
The alarm is not activated due to the intense change in light and darkness.	→ 4.3.1 Advanced detection settings [Stop alarm in low light conditions]

Areas where human, vehicles or bicycles are detected should not be included in the scene change detection.	→ 4.3.1 Advanced detection settings [Exclude from scene change]
If the image is black and white, use a different Detector from that for color images.	→ 4.3.1 Advanced detection settings [Detector used in black and white video]
Falsely detect or miss the human, vehicles or bicycles	→ 4.3.1 Advanced detection settings [Exclude from scene change]
Adjust the frequency of alarm notification	→ 4.3.1 Advanced detection settings [Alarm notification operation setting]
Notify HTTP server of alarm	→ 4.3.2 HTTP notification destination
Notify MQTT server of alarm	→ 4.3.3 MQTT transmission
Back up/upload data on the SD Memory Card.	→ 4.3.4 Maintenance screen

4.3.1 Advanced detection settings

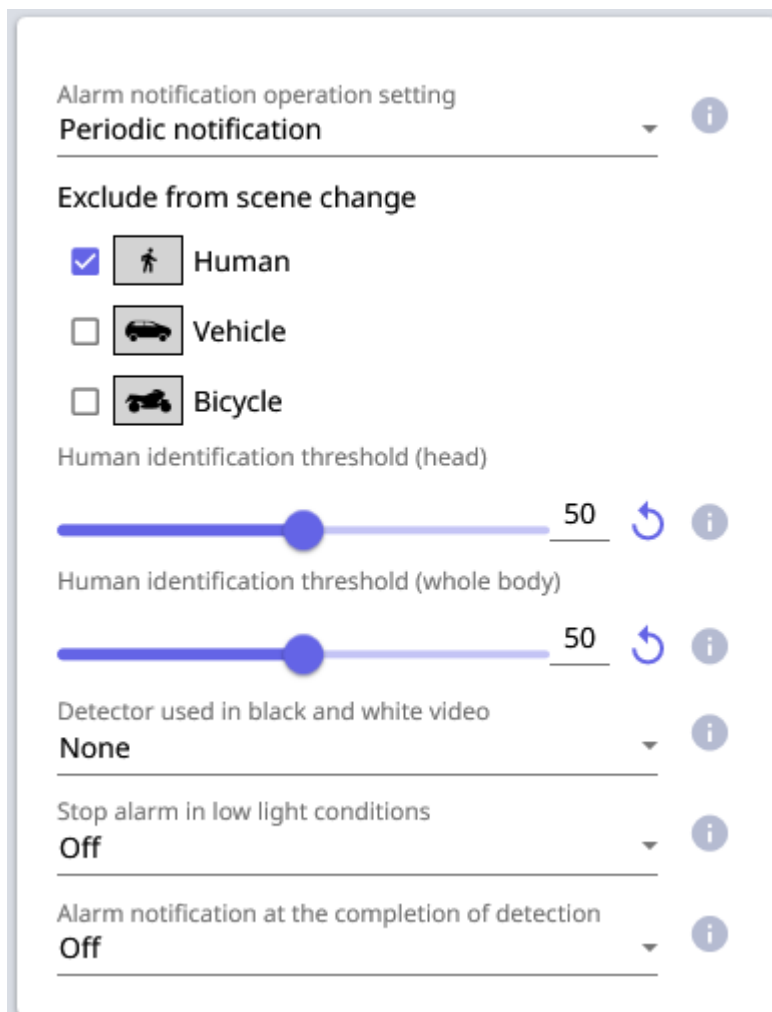

Make detailed settings related to detection. These settings are common to all detection areas 1 to 16.

1. [Alarm notification operation setting]

Sets the alarm notification operation when the alarm continues to active.

[Periodic notification]: Alarm notification is performed at [Detection time] interval.

[Continuous notification]: Alarm notification is performed continuously at [Alarm deactivation time] interval of camera setting.

[One-time notification]: Alarm notification is performed only the first time that the alarm condition has been reached.

Default: [Periodic notification]


2. [Exclude from scene change]

Select the objects you want to exclude from the scene change detection.

Default: Only [Human] is checked.

When you don't check [Human] in [Exclude from scene change], the person area in the detection area is displayed in red.

When you check [Human] in [Exclude from scene change], the person area in the detection area is excluded from the scene change.

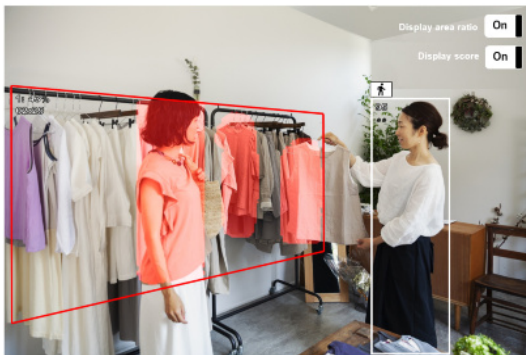

3. [Human identification threshold (head)] *This setting is made when [Human] is checked in [Exclude from scene change].

Set the detection threshold for the head. The smaller the value, the easier it is to detect as a person, but it is easier to detect incorrectly.

1 to 99

Default: 50

4. [Human identification threshold (whole body)] *This is set when [Human] is checked in [Exclude from scene change].

Set the detection threshold for the whole body. The smaller the value, the easier it is to detect as a person, but it is easier to detect incorrectly.

1 to 99

Default: 50

5. [Vehicle identification threshold] *This is set when [Vehicle] is checked in [Exclude from scene change].

Set the detection threshold for vehicles. The smaller the value, the easier it is to detect as a vehicle, but it is easier to detect incorrectly.

1 to 99

Default: 70

6. [Bicycle identification threshold] *This is set when [Bicycle] is checked in [Exclude from scene change].

Set the detection threshold for bicycles. The smaller the value, the easier it is to detect as a bicycle, but it is easier to detect incorrectly.

1 to 99

Default: 55



For 360-degree Fisheye cameras, the [Bicycle identification threshold] will not be displayed.

7. [Detector used in black and white video]

Select the Detector to be used when the input image is black and white. When [None] is selected, the alarm will not be activated.

[None], [1], [2], [3]

Default: None

8. [Stop alarm in low light conditions]

When set to [On], detection stops when the illuminance is below the set [Low light threshold].

Default: [Off]

9. [Low light threshold]

Select this if [Stop alarm in low light conditions] is set to [On]. Detection stops when the illumination level falls below the set illumination threshold.

[5 lx]、 [10 lx]、 [20 lx]、 [30 lx]、 [40 lx]、 [50 lx]

Default: 10 lx



Illumination intensity is estimated from the image, resulting in an error. The estimated illuminance is displayed on the demo screen when [Stop alarm in low light conditions] is turned on. Especially if the brightness differs greatly within the angle of view, the error will be large. For this reason, this function is recommended for use in an environment where the brightness of the entire screen clearly changes, such as when lighting is ON or OFF. Confirm operation in the actual environment before use. When the input image is black and white, detection stops regardless of the illumination intensity.

10. [Alarm notification at the completion of detection]

When [On] is selected, an alarm notification is sent upon completion of state change detection.

[On], [Off]

Default: [Off]

4.3.2 HTTP notification destination

HTTP notification destination

(1) (2) (3) (4)

Transmission

Transmission address

Transmission path name
/AISceneChangeDetection

SSL
On

Transmission port number
443

Username

Password

Transmission interval
5min

Delete the selected destination

In [HTTP notification destination], set the notification destination (1 to 4) and the notification interval for alarm notification to the HTTP server.

1. [Transmission destination 1, Transmission destination 2, Transmission destination 3, Transmission destination 4]

Alarm information can be individually notified in up to four locations. The settings of the four notification destinations are the same.

2. [Transmission]

When the check box is selected, the message is sent.

Default: Unchecked


3. [Transmission address]
Set the IP address of the notification destination.
4. [Transmission path name]
Enter the path name of the notification destination. Enter up to 128 half-width alphanumeric characters and symbols.
5. [SSL]
Select whether to use SSL for notification.
Default: On
6. [Transmission port number]
Set the port number of the notification destination.
1 to 65535
7. [Username]
Enter the user name for authentication with the notification destination. Enter up to 128 half-width alphanumeric characters and symbols.
8. [Password]
Enter the password for authentication with the notification destination. Enter up to 63 half-width alphanumeric characters and symbols.
9. [Transmission interval]
Select the time interval to notify.
[1 min]、 [2 min]、 [3 min]、 [4 min]、 [5 min]
Default: [5 min]



For details of regular HTTP transmissions, refer to the "AI Scene change detection I/F Specifications".

→ [Technical information and support videos](#)

4.3.3 MQTT transmission

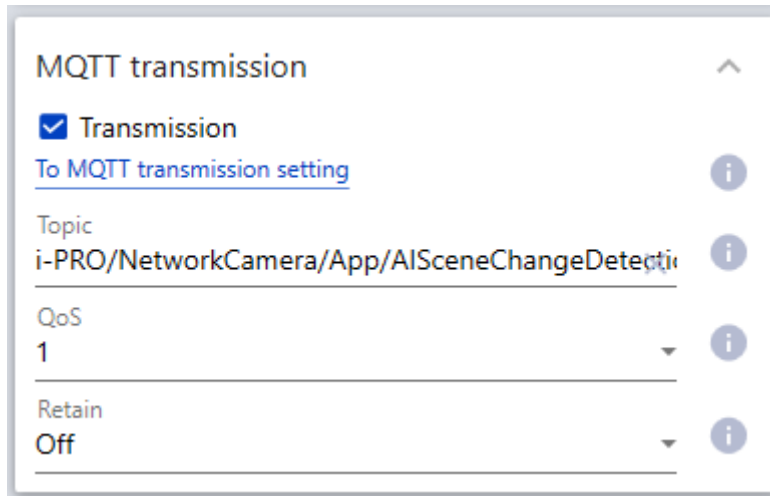

[MQTT transmission] configures the destination and send operation to send alarms to the MQTT server.

1. [Transmission]

When the check box is selected, the message is sent.

Default: Unchecked

2. [To MQTT transmission setting]

Click this button to display the MQTT setting screen on the camera.

3. [Topic]

Enter the name of the MQTT topic to be sent. Enter up to 128 half-width alphanumeric characters and symbols.

4. [QoS]

Select the level of QoS. Signal quality increases as follows: [0]<[1]<[2].

[0]: Messages are delivered up to once in QoS0. Messages are not guaranteed to reach the server.

[1]: QoS1 delivers at least one message. Messages are guaranteed to reach the destination, but may be duplicated.

[2]: QoS2 delivers the message exactly once. Messages are guaranteed to arrive only once without excess or deficiency.

Default: [1]

5. [Retain]

Select [On] to have the last notified message saved on the MQTT server.

Default: [Off]




For the payload of MQTT, refer to the "AI Scene change detection I/F Specifications".

→ [Technical information and support videos](#)

4.3.4 Maintenance screen



[Maintenance] backs up data stored in the SD Memory Card and initializes the SD Memory Card settings. Clicking [Display] displays [Maintenance].

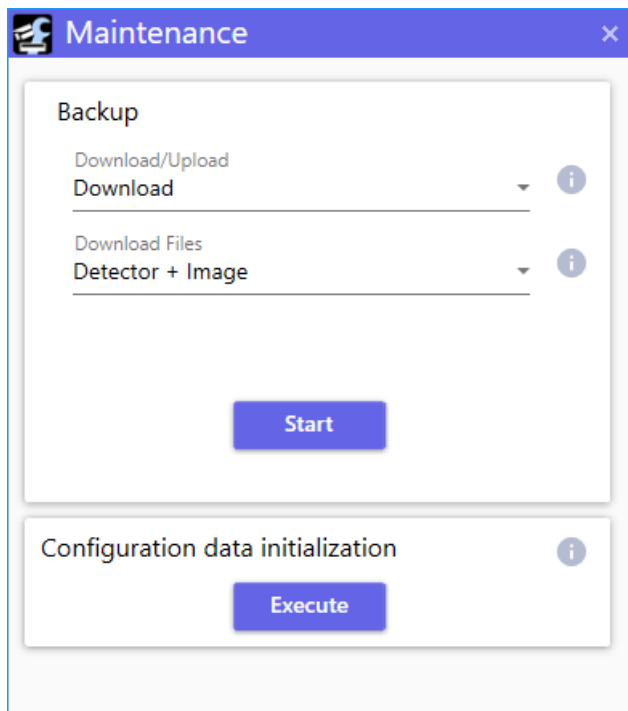

[Maintenance] downloads/uploads data on SD Memory Cards.

1. [Download/Upload]

Select the operation to be performed on the SD Memory Card.

- [Download]: Downloads Detector and Learning images from the SD Memory Card to the PC as zip files. The files to be downloaded are selected in [Download Files].
- [Upload]: Uploads zipped files generated by [Download] from PC to SD Memory Card. The files to be uploaded are specified by [Upload files].

2. [Download Files]

Select the data to download from the SD Memory Card. Set when [Download] is selected in [Download/Upload].

[Detector + Image], [Detector only]

3. [Upload files]

Select the file to be uploaded to the SD Memory Card. The file specified here is the zip file generated by [Download]. Set this when [Upload] is selected in [Download/Upload].



•In [Download], a zip file is generated in the following folder specified on the [Save in] screen of [Option] in iCT.

[Option]-[Save in]¥AISceneDetection¥yyyyMMdd_hhmmss

•Note that Learning images and Detector stored on the SD Memory Card will be deleted when [Upload] is executed. (If [Detector only] is selected for [Download Files] in [Download], Learning images will not be deleted.)

•For models with [Ext. software] [RAM capacity expansion mode] on the camera, [RAM capacity expansion mode] must be turned on prior to performing [Upload]. (If it cannot be turned ON, follow the manual procedures below.)

•Instead of performing [Upload] in [Maintenance], it is also possible to copy data directly to the SD memory card by following the procedure below.

① Format the SD memory card with the camera

② Insert SD memory card into PC

③ Unzip the file generated by [Download]

④ Create the following folder (the following is when the SD memory card is recognized as the D drive on the PC)

D:¥adamapp¥

⑤ Copy the folder unzipped in ③ (folder name: AISceneChangeDetection) to the folder created in ④


⑥ Insert the SD memory card into the camera and restart the camera

•[Upload] does not upload configuration data such as detection area settings. To upload configuration data, select [AI Scene Change Detection] from [Upload Files] on the iCT main screen and upload the configuration data.

4. [Configuration data initialization]

Click [Execute] to initialize all settings.

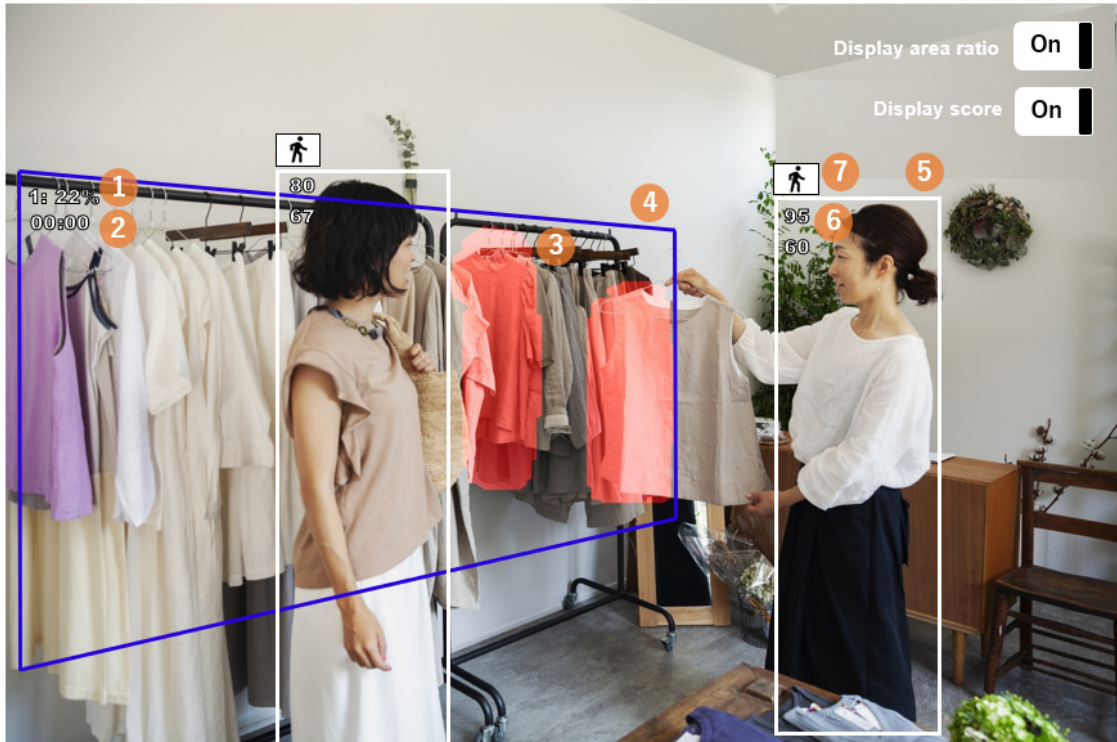


5. Demo screen



The following is displayed on the demo screen.

1. Detection area number: Area change ratio
 - Detection area number: Displays the number of the specified detection areas.
 - Area change ratio : When [Display area ratio] switch is set to [On], $(\text{area over [Image change threshold]}) / (\text{area of the entire detection area}) \times 100 (\%)$ is displayed.
2. Duration of the error condition
(minutes):(seconds) is displayed.
3. Areas above [Image change threshold]
Displayed as red areas.
4. Detection area
The set detection area is displayed in color.
 - Light blue: The duration of the abnormal condition is 00:00 and the alarm has not been detected.
 - Blue: Area where the alarm has not been activated because the duration of the error is less than [Detection time].


- Red: Area where the alarm is activated because the duration of the error condition is [Detection time] or longer.
- 5. Detection frame
If [Human], [Vehicle] or [Bicycle] is checked in [Exclude from scene change] , a white box is displayed when human, vehicle or bicycle is detected.
- 6. Detection score
When [Display score] switch is set to ON, the detection score for human, vehicle or bicycle are displayed in the detection frame. For human, head score (upper) and whole body score (lower) are displayed. When the detection scores are below the threshold, "**" is displayed.
- 7. Icon
When [Display score] switch is set to ON, the icons of human, vehicle or bicycle are displayed in the upper left corner of the detection frame.

Human:  , Vehicle:  , Bicycle: 



- Use Mozilla Firefox, Google™ Chrome™, or Microsoft Edge to display the demo screen. It does not support Internet Explorer.
 - Only one browser can display the demo screen. Simultaneous access by multiple browsers is not supported.
 - If the camera [Data encryption] is set to [On], no images are displayed on the demo screen.
 - The demo screen does not support HTTPS connection.
- Also, when used at the same time as other function extension software, the positional displacement of the detection frame from the demo screen may be large.
- It is not recommended to use the demo screen in actual operation because it is intended for demonstration.

6. Schedule setting

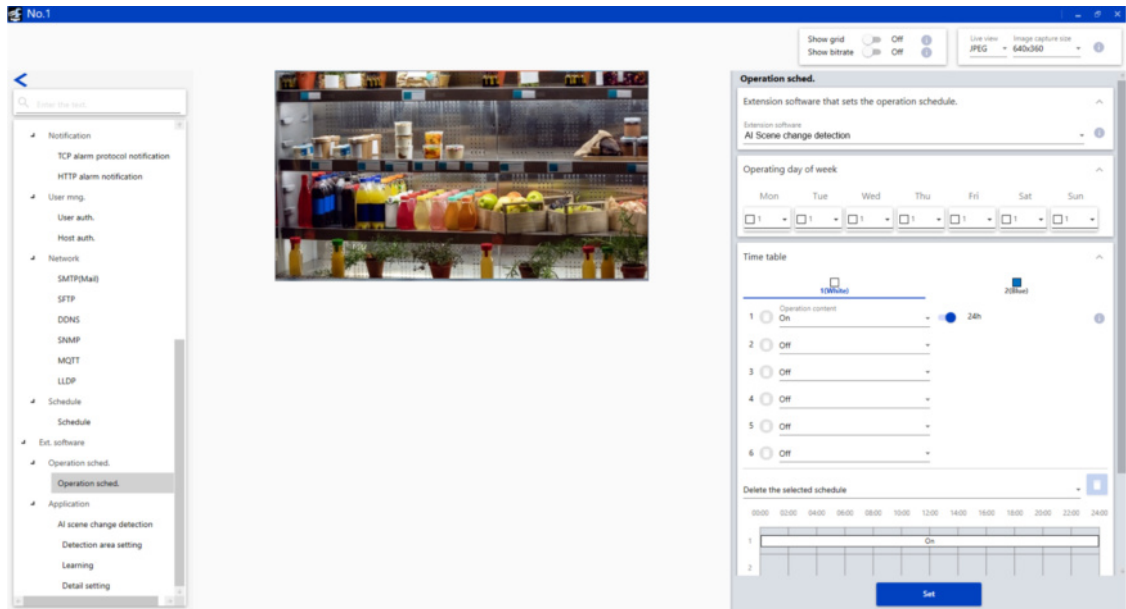

[Operation schedule] sets the operation date and time of the product.

8. [Extension software that sets the operation schedule.]

Select [AI Scene change detection].

9. [Operating day of week]

Set the operation for each day of the week. The day of the week for which [Off] is selected does not work.

Time table 1, Time table 2, [Off]

Default: Select Time table 1 for all Monday through Sunday.

10. [Time table]

Sets the operation time and operation details of the product. You can set up to 6 operating times for [Time table] and [Operation content]. You can set the operation time for the day of the week selected in [Operating day of week].

• [Operation content]

Select the detection setting for operating the product.

[Off]: Disable the product.

[On]: Enable the product.

Sets the operation time for the items set in [On]. When [24h] is selected, it runs all day.

Default:

6. Schedule setting

[Time table]

- Operation 1: [On], [24h]
- Operation 2 to 6: [Off]

Timetable 2

- Operation 1 to 6: [Off]



If the camera [Operation schedule] is [Off], the camera setting window cannot be opened.

7. Other

7.1 Specifications

7.1.1 PC environment required

For details about the PC environment used for setting, refer to the camera's instruction manual.

7.1.2 Supported cameras

This product can be used with cameras that support AI applications and SD Memory Cards.



- This product can be used with only one camera of an AI multi-sensor camera.
- This product can only be used in fixed positions on PTZ network cameras.
- For AI 360-degree fisheye cameras, this product can only be used in fisheye imaging modes.

7.1.3 Combination with other AI applications



For the combination of this product and other AI applications and restrictions, refer to the following.

→ [Technical information and support videos](#)

<C0103>

7.1.4 About the SD Memory Card

- An SD Memory Card is essential for both learning and operation.
- The use of an SD Memory Card for i-PRO devices is recommended.
- This product has a data backup function on the SD Memory Card.
→ [4.3.4 Maintenance screen](#)
- The recording of the camera on the SD Memory Card may be affected when the camera starts up or Learning images is collected or learned.

7. Other

7.1 Specifications

- If the SD Memory Card is formatted while this product is in use, restart the camera.
- This product notifies an alarm when the SD memory card cannot be accessed.

7.1.5 Learning

This is the specification for product learning.

Item	Description
Learning images	Up to 1,000 images can be saved.
Detector	Up to 3 can be saved.
How to save the learning images	•Manual save •Auto save (10 to 200 images can be saved in 1 to 60 minute intervals)
Number of images that can be learned	2 to 200 images
Recommended conditions of learning images	It is recommended to collect images with patterns that differ in how they are displayed under normal conditions, such as differences in lighting or exposure to light.
SD memory card space	The capacity of the SD memory card available on the camera body is reduced by the amount of data used on the product. (Estimation of Data Size) •About 100MB per Detector •Per learning images: about 5 MB (for 4K resolution), about 1 MB (for Full HD resolution) The actual remaining space can be checked from the SD memory card menu on the camera.
Estimate of the learning time	Depending on the number of learning images, the standard is as follows. (When the learning area is initialized) •Learning 10 images : 3 minutes •Learning 200 images : 10 minutes

7.1.6 Operation

This is the specification for the operation of this product.

Function	Item	Description
Scene	Detection frame rate	1fps

change detection	Detection area	Up to 16 areas can be set.
	Detection time	Available from 2s to 1h
	Detection conditions	You can choose whether to recognize learned status as normal or "after scene change".
	Detection threshold	Thresholds to be judged as "after scene change" can be adjusted while viewing the demo screen.
	Operation selection when switching between black and white	Alarm notification can be turned off or detector can be selected for black-and-white video.
	Other settings	<ul style="list-style-type: none"> • It is possible to exclude human, vehicle or bicycle from scene change • It is possible to stop alarm in low light conditions
Alarm notification	Corresponding protocols	<ul style="list-style-type: none"> • TCP alarm notification • Stream-additional information • HTTP notification • MQTT transmission
	Contents of Notification	<ul style="list-style-type: none"> • Alarm triggered area • Detector number • Alarm duration

7.2 Trademarks and Registered Commercial Code

- Internet Explorer and Microsoft Edge are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Screen photographs are used according to the guidelines of Microsoft Corporation.
- Google Chrome is a trademark of Google LLC.
- Firefox is a trademark of the Mozilla Foundation in the United States and other countries.
- ONVIF is a trademark of ONVIF Inc.

7.3 Open Source Software

- This product uses the following open source software.
- Refer to "Open Source Software" for the corresponding license statement.

Software name	License Name
OpenCV	Apache-2.0
Libjpeg-turbo	The IJG (Independent JPEG Group) License The Modified (3-clause) BSD License The zlib License
Cwebsocket	The MIT License

See [Open Source Software] below for the corresponding license text.

Open Source Software

Apache License 2.0

Apache License

Version 2.0, January 2004

<http://www.apache.org/licenses/>

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

“License” shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

“Licensor” shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

“Legal Entity” shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, “control” means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

“You” (or “Your”) shall mean an individual or Legal Entity exercising permissions granted by this License.

“Source” form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

“Object” form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

“Work” shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

“Derivative Works” shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

“Contribution” shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, “submitted” means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as “Not a Contribution.”

“Contributor” shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
 - (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and

- (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
- (c) You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
- (d) If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

- 5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of

this License, without any additional terms or conditions.

Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this

License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets “[]” replaced with your own identifying information. (Don’t include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same “printed page” as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the “License”);
you may not use this file except in compliance with the License.
You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an “AS IS” BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

The MIT License

The MIT License (MIT)

Copyright (c) 2015 Andrew Putilov

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

libjpeg-turbo Licenses

libjpeg-turbo is covered by three compatible BSD-style open source licenses:

- The IJG (Independent JPEG Group) License, which is listed in [README.ijg](#)
README.ijg This license applies to the libjpeg API library and associated programs (any code inherited from libjpeg, and any modifications to that code.)
- The Modified (3-clause) BSD License, which is listed below
This license covers the TurboJPEG API library and associated programs, as well as the build system.
- The [zlib License](#)
zlib License This license is a subset of the other two, and it covers the libjpeg-turbo SIMD

extensions.

Complying with the libjpeg-turbo Licenses

This section provides a roll-up of the libjpeg-turbo licensing terms, to the best of our understanding.

1. If you are distributing a modified version of the libjpeg-turbo source, then:

- i. You cannot alter or remove any existing copyright or license notices from the source.

Origin

- Clause 1 of the IJG License • Clause 1 of the Modified BSD License
- Clauses 1 and 3 of the zlib License

- ii. You must add your own copyright notice to the header of each source file you modified, so others can tell that you modified that file (if there is not an existing copyright header in that file, then you can simply add a notice stating that you modified the file.)

Origin

- Clause 1 of the IJG License • Clause 2 of the zlib License

- iii. You must include the IJG README file, and you must not alter any of the copyright or license text in that file.

Origin

- Clause 1 of the IJG License

2. If you are distributing only libjpeg-turbo binaries without the source, or if you are distributing an application that statically links with libjpeg-turbo, then:

- i. Your product documentation must include a message stating:

This software is based in part on the work of the Independent JPEG Group.

Origin

- Clause 2 of the IJG license

- ii. If your binary distribution includes or uses the TurboJPEG API, then your product documentation must include the text of the Modified BSD License (see below.)

Origin

- Clause 2 of the Modified BSD License

3. You cannot use the name of the IJG or The libjpeg-turbo Project or the contributors thereof in advertising, publicity, etc.

Origin

- IJG License • Clause 3 of the Modified BSD License

4. The IJG and The libjpeg-turbo Project do not warrant libjpeg-turbo to be free of defects, nor do we accept any liability for undesirable consequences resulting from your use of the software.

Origin

- IJG License
- Modified BSD License
- zlib License

The Modified (3-clause) BSD License

Copyright (C)2009–2019 D. R. Commander. All Rights Reserved. Copyright (C)2015 Viktor Szathmáry. All Rights Reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the libjpeg-turbo Project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS", AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Why Three Licenses?

The zlib License could have been used instead of the Modified (3-clause) BSD License, and since the IJG License effectively subsumes the distribution conditions of the zlib License, this would have effectively placed libjpeg-turbo binary distributions under the IJG License. However, the IJG

License specifically refers to the Independent JPEG Group and does not extend attribution and endorsement protections to other entities. Thus, it was desirable to choose a license that granted us the same protections for new code that were granted to the IJG for code derived from their software.

7.4 Copyright

Transfer, copying, disassembly, decompilation, and reverse engineering of the software contained in this product are prohibited. In addition, any act of export that violates the export laws and regulations of all software included in this product is prohibited.

7.5 Disclaimer

- The purpose of this product is to obtain images for monitoring specific areas. This product alone is not intended to prevent crimes.
- In no event shall we be liable for the following:
 - Any incidental, special or consequential damages or damages arising directly or indirectly in connection with the product
 - Any inconvenience, damage, or damage incurred due to the inability of an image to be displayed or recorded or the loss of recorded information due to any reason including failure of the product
 - Failure or inconvenience, damage, or damage caused by a system combined with a third party device
 - Claims or claims for damages caused by infringement of privacy by an individual or organization that has become the subject of a picture as a result of the use of surveillance images and records made public for some reason (including use with the User Authentication Off).
 - The stored information is lost for some reason (including when the Product is initialized due to forgetting the authentication information such as user name and password)

7.6 Troubleshooting



Check the issues from the following URL.

→[Technical information and support videos](#)

<C0326>